


SHED INSTRUCTIONS

BASE KIT 4

Apex/Reverse apex sheds with a double door & truss

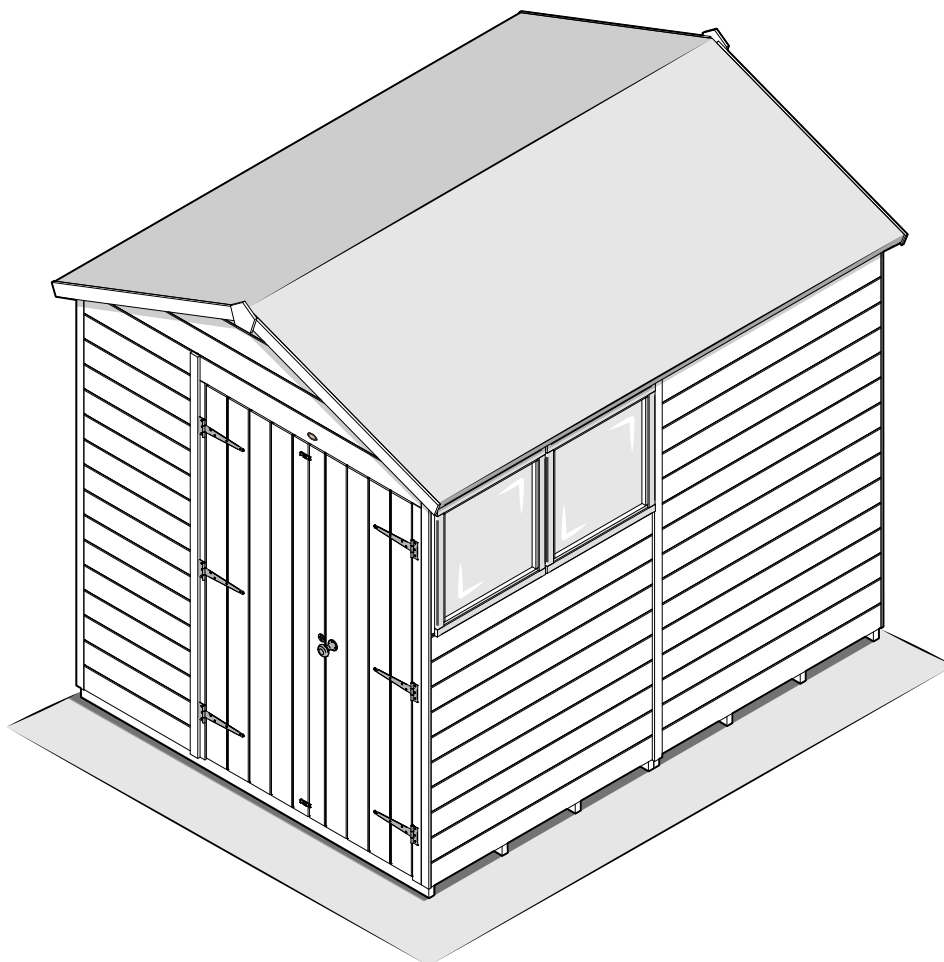

Please note these instructions are generic, any differences will be outlined in the steps.

Missing something or need more information? Visit our website for spare instructions and more information

Call our aftersales team on
0333 321 3142

www.forestgarden.co.uk

Forest Garden, Oak Drive, Hartlebury Trading Estate, Hartlebury, Worcestershire, DY10 4JB
EU Authorised Representative: Authorised Representative Service, 77 Camden Street Lower Dublin, D02 XE80, Ireland
Tel. +353 1697 2151 E-mail: contact@arenquiries.com


BEFORE YOU START..

Please read through this guide to prepare yourself before assembling your shed. We recommend that you **check all the components and fixings**. Your parts list can be found on your shed label.

All our sheds are constructed in the same way, they simply come with different components depending on the type of shed you have. We have sent you **generic fixing packs** and **generic loose item packs** to suit the shed range. You should expect there to be leftover fixings and loose items.

BASE PREPARATION

It is vital that you build your new shed on a **solid, level base**. Timber or Plastic Shed Bases are ideal, as is solid concrete or concrete slabs.

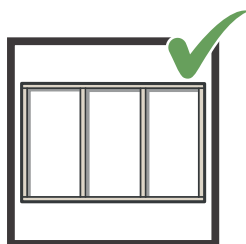


Timber Base
Self-constructed/
Buy pre-made



Concrete
Concrete surface/
Concrete slabs



Pro Shed Base
Interlocking
eco-friendly base

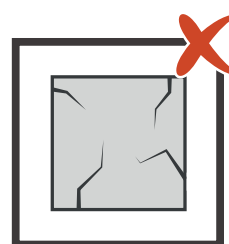

Broken Slabs/Gaps
Uneven slab sizes
with no cement




Loose Soil
A base of soil or
grass only

If you have an existing base and think it is suitable for your new shed to be sited on, it is important you check that it is level and **does not deviate by any more than 15mm** from edge to edge. If this is not the case the building will twist, causing gaps to appear in the sections and the roof, doors, and windows to misalign.


There is more information on base preparation on our website www.forestgarden.co.uk

TOOLS REQUIRED

We recommend using the following tools (**not supplied**):

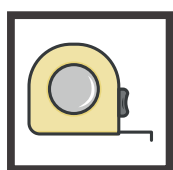


Tape Measure

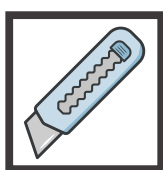

**Sharp Knife &
Scissors**




**PZ2 Pozidriv
& Flat Head
Screwdriver**

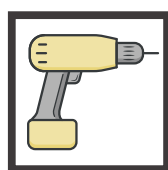


**Drill & 2-6mm
Drill Bits**



**Hammer/
Rubber Mallet**

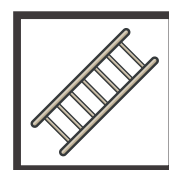

**Fit For Purpose
Ladder**

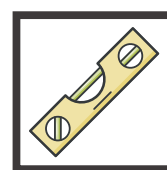

Spirit Level

We recommend getting everything aligned properly before screwing together and that the **screw holes are pre-drilled** at this stage to **avoid splitting the timber**. We do not provide pre-drilled holes due to the nature of expanding and shrinking timber, which can cause pre-drilled holes to misalign.



IMPORTANT

Assembly requires 2+ adults.

REMINDER

Always pre-drill before screwing.

PLEASE KEEP PLASTIC BAGS AND SMALL PARTS AWAY FROM BABIES AND CHILDREN.
TO AVOID DANGER OF SUFFOCATION, PLEASE KEEP THE PROTECTIVE FILM AWAY FROM BABIES AND CHILDREN.
CHECK AND TIGHTEN ALL THE FIXINGS APPLIED TO THIS PRODUCT ON A REGULAR BASIS.

CARE & ATTENTION

To help you get the most out of our products it is useful to know a little more about the properties of timber, what is normal and how your shed may behave as the seasons change. Wood is an extremely durable material for construction but as a natural product when used outdoors it is susceptible to changes in the environment.

THINGS THAT YOU MIGHT SEE IN YOUR PRODUCT



Movement, Twisting & Warping

Wood contains a natural level of moisture so decreasing humidity levels in the surrounding air may cause panels to change their shape as the porous fibres shrink. This can be exaggerated during prolonged periods of dry weather. Movement and gaps in timber products are normal, in most cases the wood will revert to its original form once the high temperatures subside and there is more moisture content in the air. Similarly, in the winter months, the opposite may occur with wood swelling.



Expansion, Contraction, Splits & Cracks

All timber will expand and contract according to its environment. As a result of this expansion and contraction, it is very common to see splits and cracks developing in the wood. Splits are common during the spring and summer months as the wood begins to dry out. The outer surface dries first and contracts, contracting over a still expanded core of the wood. The result of this is that splits and cracks appear along the grain of wood. These splits are not a fault and do not affect the structural integrity of a product.



Mould & Blue Stain

Mould is a surface-dwelling fungus that feeds on the nutrients and debris contained in the surface cells of timber. The most common problems associated with mould are discoloured timber and an increase in permeability of the timber. Blue stain is part of the same family but penetrates deeper into the surface layers of the timber. It stains the timber a dark blue, whereas mould is usually black. These do not cause the timber to rot. Keep the building well ventilated to avoid mould.

Advice On Felt Handling & Usage

Roofing felt is flexible at temperatures above 5°C. In cold temperatures extra care must be taken when handling and installing to prevent cracking and damage to the felt. The felt should not be rolled, folded, or used in temperatures lower than 5° C. In cold temperatures the felt should be stored above 10°C (indoors) for 24 hours prior to use. Felt must be lifted, not dragged, and should be stored on its end on a dry surface. **Please contact our aftersales team if you are missing your felt.**

8 TOP TIPS TO ENSURE YOUR SHED IS FULLY WATERPROOF


- 1 POSITION YOUR SHED IN THE BEST LOCATION IN YOUR GARDEN**
Avoid areas where water pools and which are constantly wet. Position away from trees and cut back any overhanging foliage which can cause moisture to be trapped against the walls and debris to collect on the roof.
- 2 RAISE YOUR SHED OFF THE GROUND**
Ideally, any concrete base should be the same footprint as the shed to allow surface water to run off without pooling. A timber base can also be used. Raise your shed 50mm above ground level.
- 3 SEAL THE BEARERS**
If using a wooden base, we recommend treating it with a treatment containing wax or oil. Also coat the bearers that meet the ground to prevent moisture rising.
- 4 USE AN END GRAIN PROTECTOR**
To protect the corners and panel joins, an end grain protector can be applied.
- 5 SEAL THE PANELS & WINDOWS**
Use a flexible silicone sealant around windows to prevent water ingress. This can also be used where two sections of the shed join together. Apply internally.
- 6 CONSIDER ADDING GUTTERS**
Adding guttering around the fascia of the shed will redirect rainwater away from the shed's foundation.
- 7 KEEP VENTILATED**
Good airflow around the perimeter of the shed and regular ventilation inside the shed will help prevent mould and mildew.
- 8 CONSIDER A WATER SEALANT**
You may want to consider painting your shed with a water sealant at least once a year. This will help reduce the risk of water ingress. We would recommend using 'Bostik Cementone Water Seal' of which can be purchased from multiple DIY stores.

HEALTH & SAFETY

We strongly recommend that PPE (Personal Protective Equipment) is used throughout your build to ensure you are protected from any potential health and safety risks. **Do not exempt yourself from wearing PPE.**




Cut-Resistant
Gloves

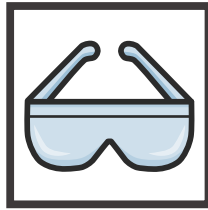

Protective Glasses



Protective Boots

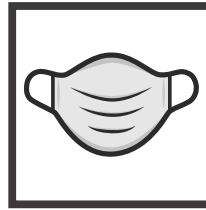

Protective Mask



Working At
Height

THE ROOF OF THIS BUILDING IS NOT A LOAD BEARING STRUCTURE.

When working at height ensure to use the equipment recommended and wear the correct PPE.

Be aware of ground conditions at all times, when working at height.

The components provided may be heavy. Please lift with caution and with a minimum of 2 people.

Please carefully unpack your shed and loose components as they may have moved during transportation.

TREATMENT INFORMATION

The treatment applied to your shed is to ensure longevity and protection against fungal decay and rot.

This may leave colour variations, but these will even out as the moisture content stabilises.

The treatment applied may leave green spots, please note this is not rot.

Pressure Treatment
Pressure treatment is to provide protection against rot
Pressure treated sheds do not need to be re-treated every year
25 year guarantee

Use the 'waterproofing top tips' to increase the longevity of your shed.

See our website for more information at [www.forestgarden.co.uk /guide-to-our-products/](http://www.forestgarden.co.uk/guide-to-our-products/)

Treated timber contains biocidal products for control of wood destroying organisms.

Active Ingredients - Basic Copper Carbonate, DDA Carbonate, DDA Chloride.

- Wear gloves when handling.
- Avoid inhalation of sawdust.
- Do not use in contact with drinking water or food.
- Do not use for animal bedding or in fish ponds.
- Dispose of treated wood responsibly.
- Treated products cannot be recycled as the wood is no longer in its original virgin state.
- Once the treatment has dried there is no risk of toxic contamination. The risk would come from the treatment before it is added to our products.

DISCLAIMER

Check you have all your parts prior to assembly.

Timber is a natural material of which will shrink and swell because of varying moisture content.

Assembly of damaged parts may be deemed to be acceptance, and this may affect the remedies you are entitled to.

For self installation you must follow these steps as they have been thorough our risk assessments and are in accordance with our health and safety guidelines.

If the product is not constructed in accordance with the instructions, or is altered in anyway (e.g. painted), the manufacturer cannot be held liable for any resulting damage.

If you are organising a third party to install your shed, it is best not to schedule this immediately on receipt of your order, to give you time to check your delivery.

IDENTIFY YOUR CHOSEN SHED








From the **floor plans** below, identify your shed based on the **width, depth** and **roof type** provided. You will need this to identify the side panel positions before assembling your shed. **Use the key as a guide.**

KEY

- A** 1ft Panel (295 x 1831mm)
- B** 2ft Panel (590 x 1831mm)
(With & without windows)
- C** 3ft Panel (885 x 1831mm)
(With & without windows)
- D** 4ft Panel (1180 x 1831mm)
(With & without windows)
- E** 3ft Door Panel (885 x 1831mm)
- F** 4ft Door Panel (1180 x 1831mm)

PLEASE NOTE

Same size panels are interchangeable.
Hinge your single door onto either side.

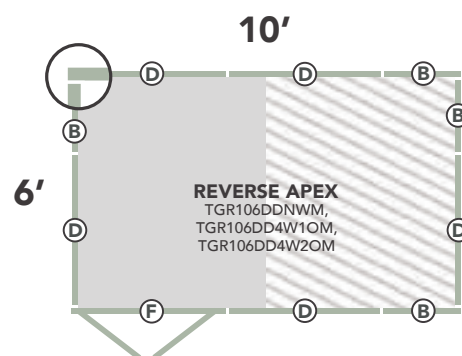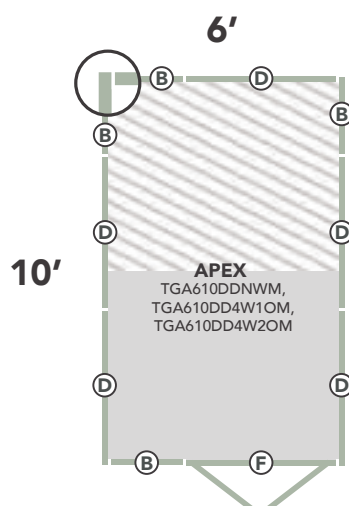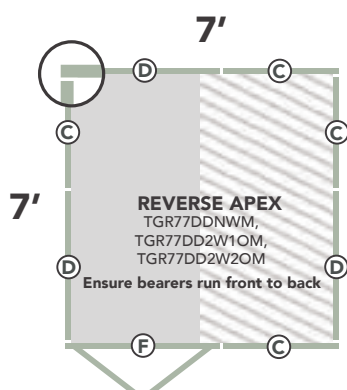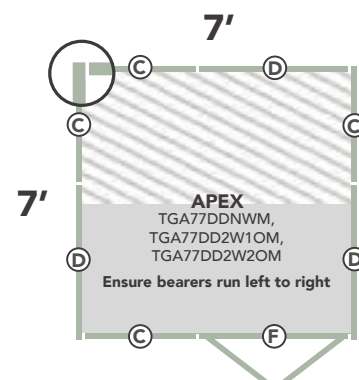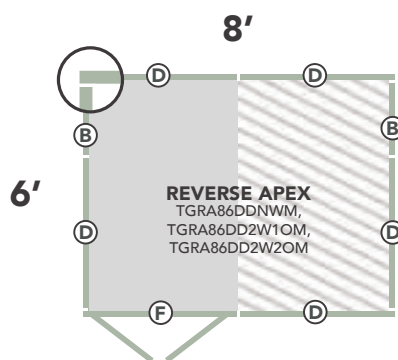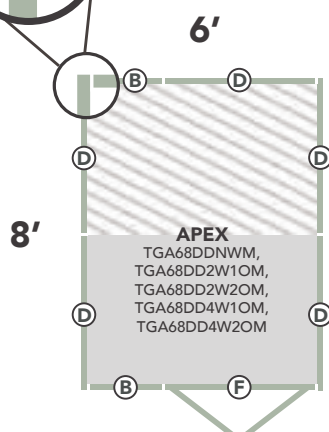


FIXING PACKS

We have provided **several fixing packs** for your build. Each fixing pack will contain fixings for each step of the assembly.




These fixing packs are generic, to suit the modular shed range. Visuals in each of the **steps are for reference only** and may slightly vary depending on the shed you have chosen. Any major differences will be outlined in the steps. You may receive more than the required amount of fixings in order to provide enough fixings for the larger sheds. We have designed them to be as simple as possible to follow, but **if you have any issues, please contact our aftersales team.** **Check your parts list prior to assembly**, of which can be found on your shed label.

FLOOR ASSEMBLY

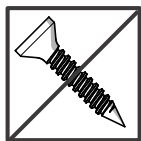

THERE ARE NO FIXINGS FOR THIS SECTION.


Look through the different visuals and follow the step that suits your chosen shed.

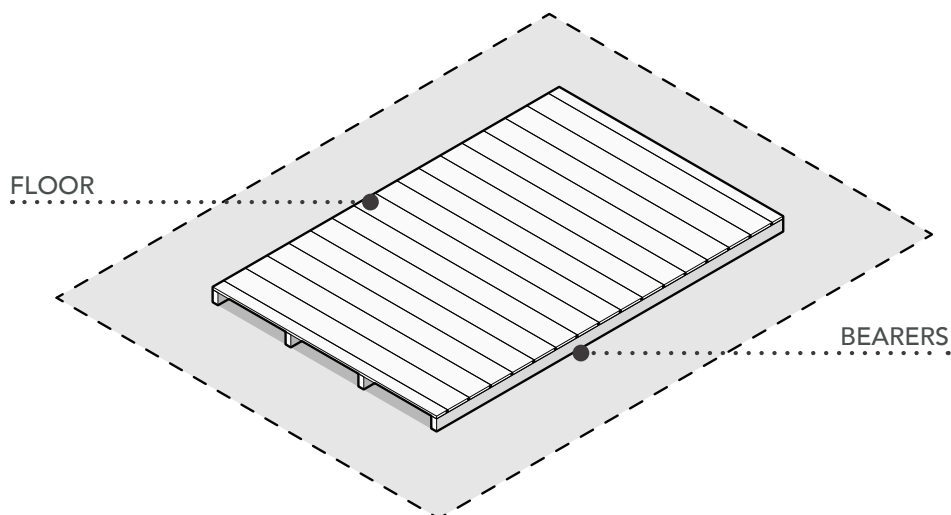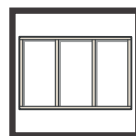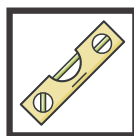

Before assembly, **your Floor must be firm and level** to ensure the shed lines up and is assembled properly. We recommend that there should be **access to all sides of your shed for assembly and any maintenance.**

STEP 1: POSITION FLOOR(S)

Due to the health and safety concerns of the Floor weights, we **do not** advise to secure the floors together. If you wish to secure the floors together, you do so at your own risk.

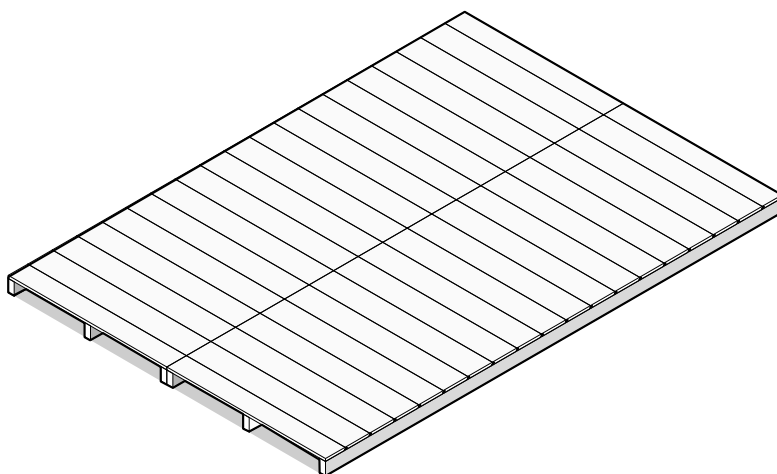

DOUBLE FLOOR

Position the Floors in your desired location. **Butt the Floor bearers together** and ensure they are flush on each side. The **bearers** will be butted together **along their side face** as shown above.


FIXED WINDOW ASSEMBLY

(PLEASE SKIP THIS SECTION IF YOUR SHED HAS NO WINDOWS OR ONLY OPENING WINDOWS)

FIXING PACK CONTAINS:


FIXING PACK CODE: TGFIXWINFP

You may receive more than one of the same fixing pack to provide enough fixings for the sheds with more windows.

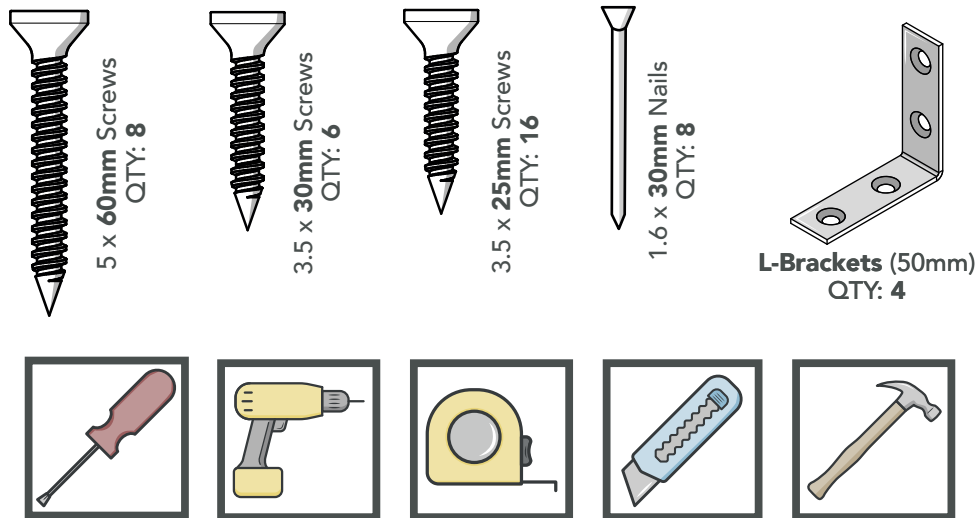

STEP 1: SECURING THE TOP BOARD

ONE & TWO FIXED WINDOWS

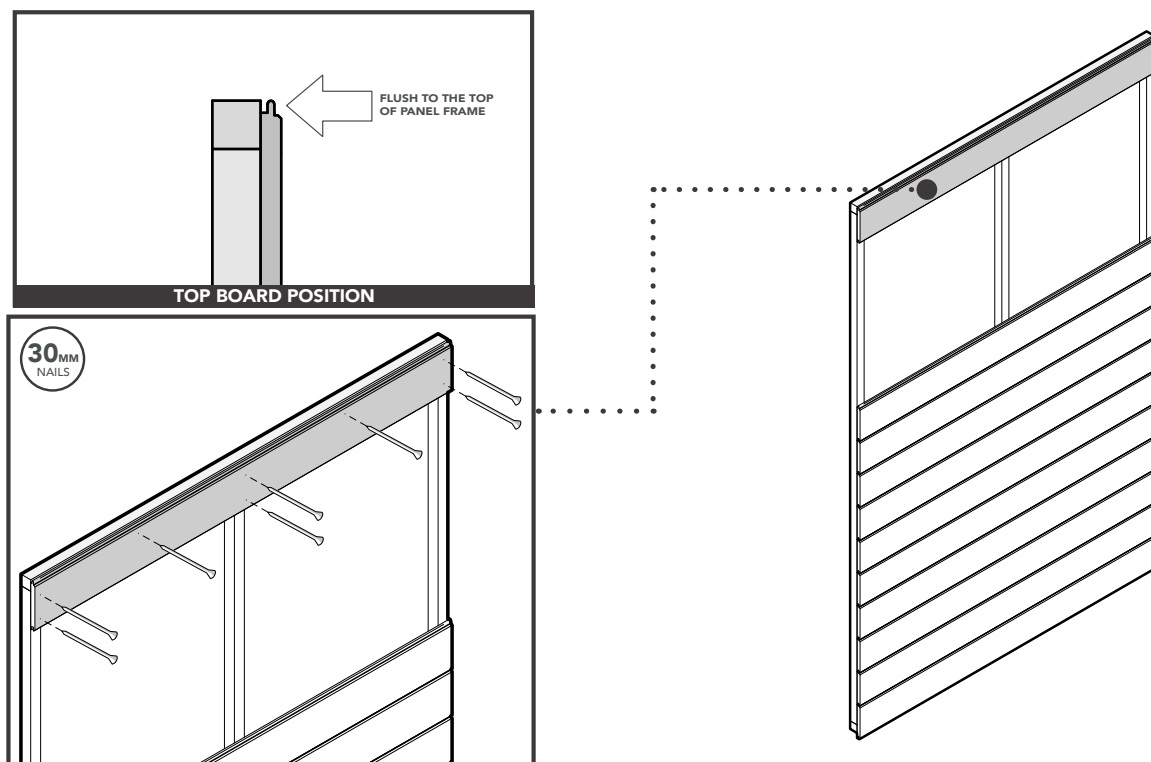

SECURE TOP BOARD

Position the Top Board to the top of the Window Panel framework, ensuring it is flush as shown above. Secure the Top Board to the Window Panel framework behind with the nails provided.


2ft Top Board (121x12x590mm), 3ft Top Board (121x12x885mm), 4ft Top Board (121x12x1180mm)

STEP 2: WINDOW SILL ASSEMBLY



Please Note

This batten needs to be removed from the window before continuing.

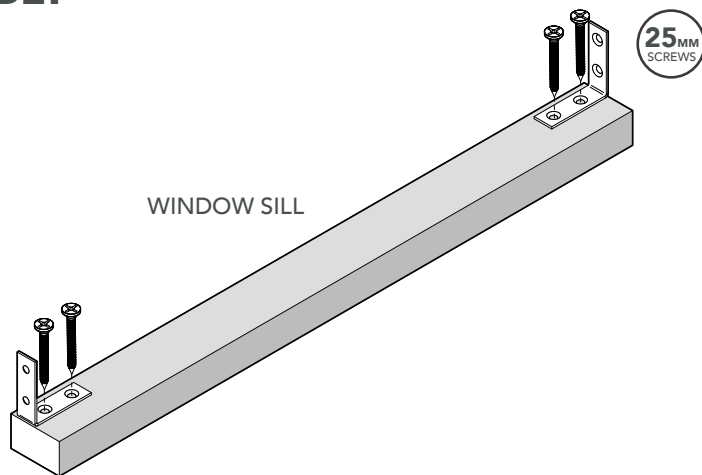


WINDOW SILL

L - BRACKETS


Position 2 L-Brackets to each end of the Window Sill, make sure they are flush to the long side, as shown above.

2ft Window Sill (45x28x534mm), 3ft Window Sill (45x28x400mm), 4ft Window Sill (45x28x548mm)

ONE FIXED WINDOW

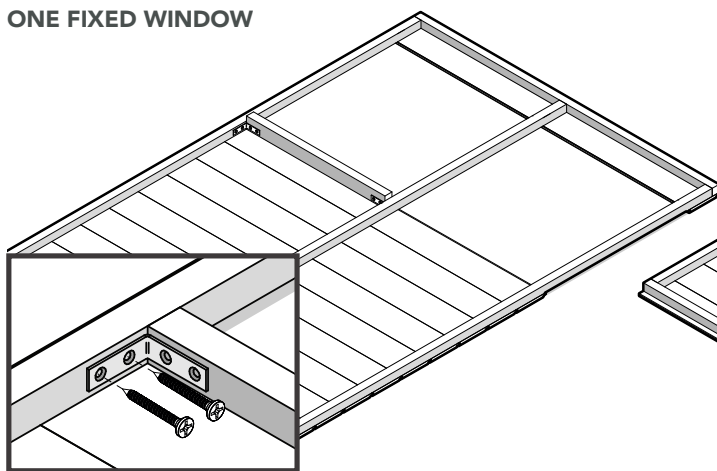

TWO FIXED WINDOWS


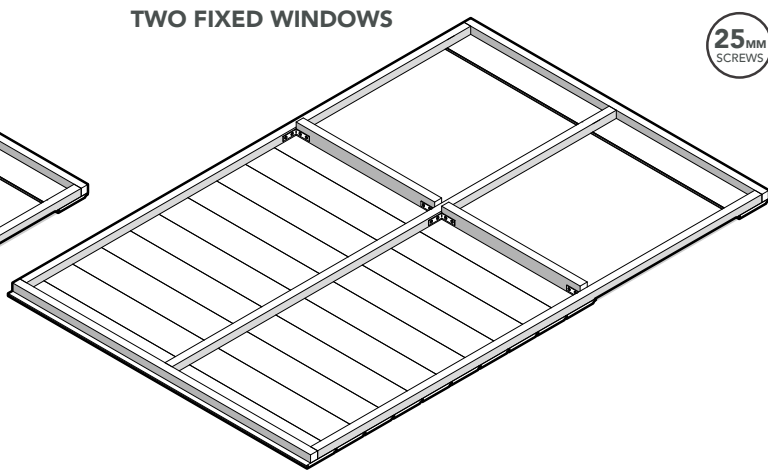


WINDOW SILL(S)

Position the Window Sill(s) flush to the top of the board in the window opening. **Secure the Window Sill(s) using the L-Brackets to the Window Panel framework. Use 4x 25mm screws per Window Sill.**

STEP 3: WINDOW COVER STRIPS

ONE & TWO FIXED WINDOWS

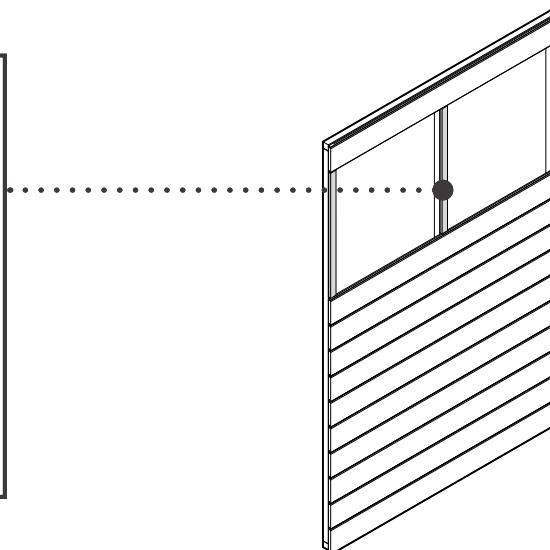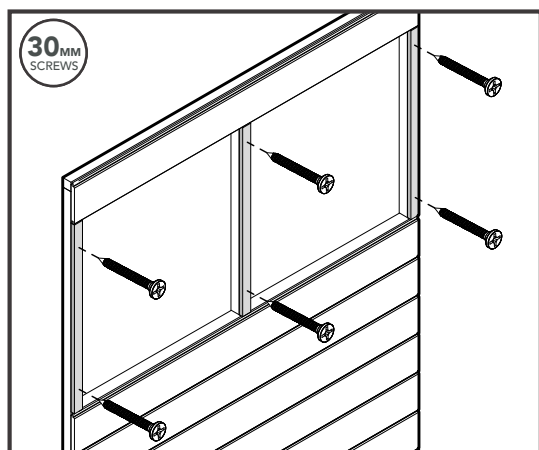



SECURE WINDOW COVER STRIPS

Position and secure the Window Cover Strips to the Window Panel framework.



Window Cover Strips (28x12x560mm)

STEP 4: SECURING WINDOW

ONE FIXED WINDOW

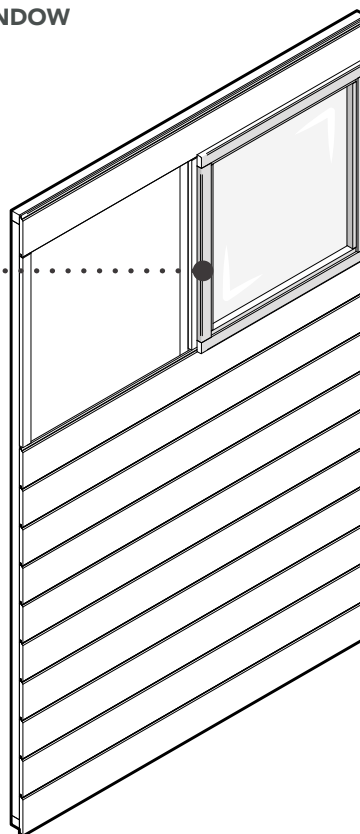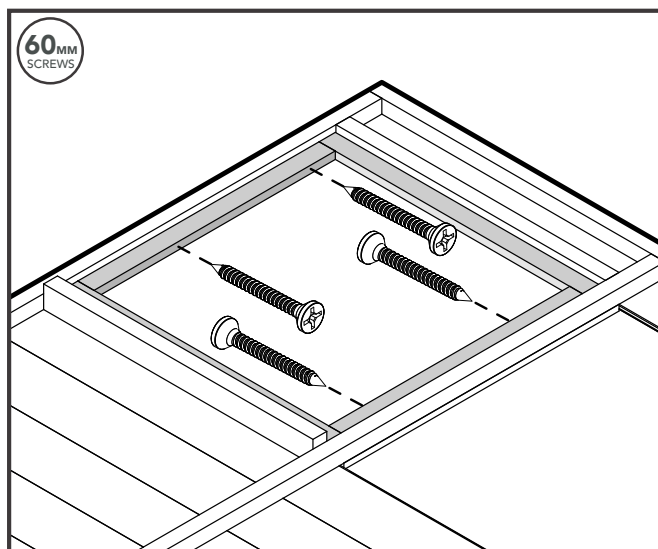

TWO FIXED WINDOWS

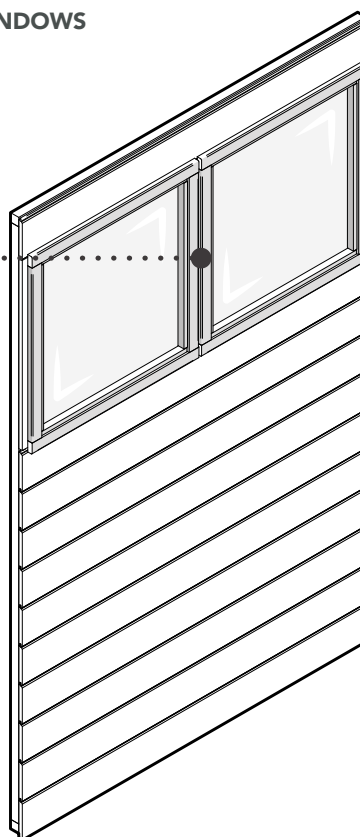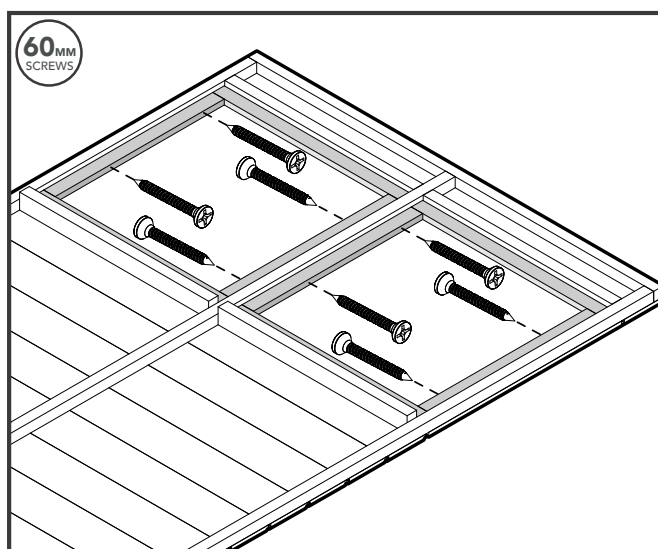

SECURING THE WINDOW

Position the Window into the Window opening Panel and secure in to the window panel framework, as shown above.


OPENING WINDOW ASSEMBLY

(PLEASE SKIP THIS SECTION IF YOUR SHED HAS NO WINDOWS)


FIXING PACK CONTAINS:

FIXING PACK CODE: TGOPENSHEDEWINFP

You may receive more than one of the same fixing pack to provide enough fixings for the sheds with more windows.

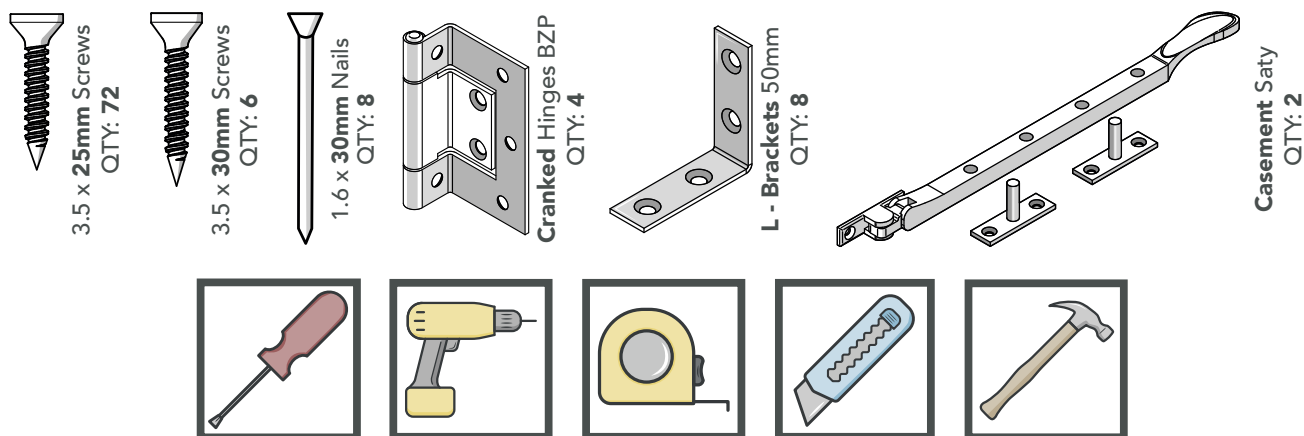

STEP 1: SECURING THE TOP BOARD

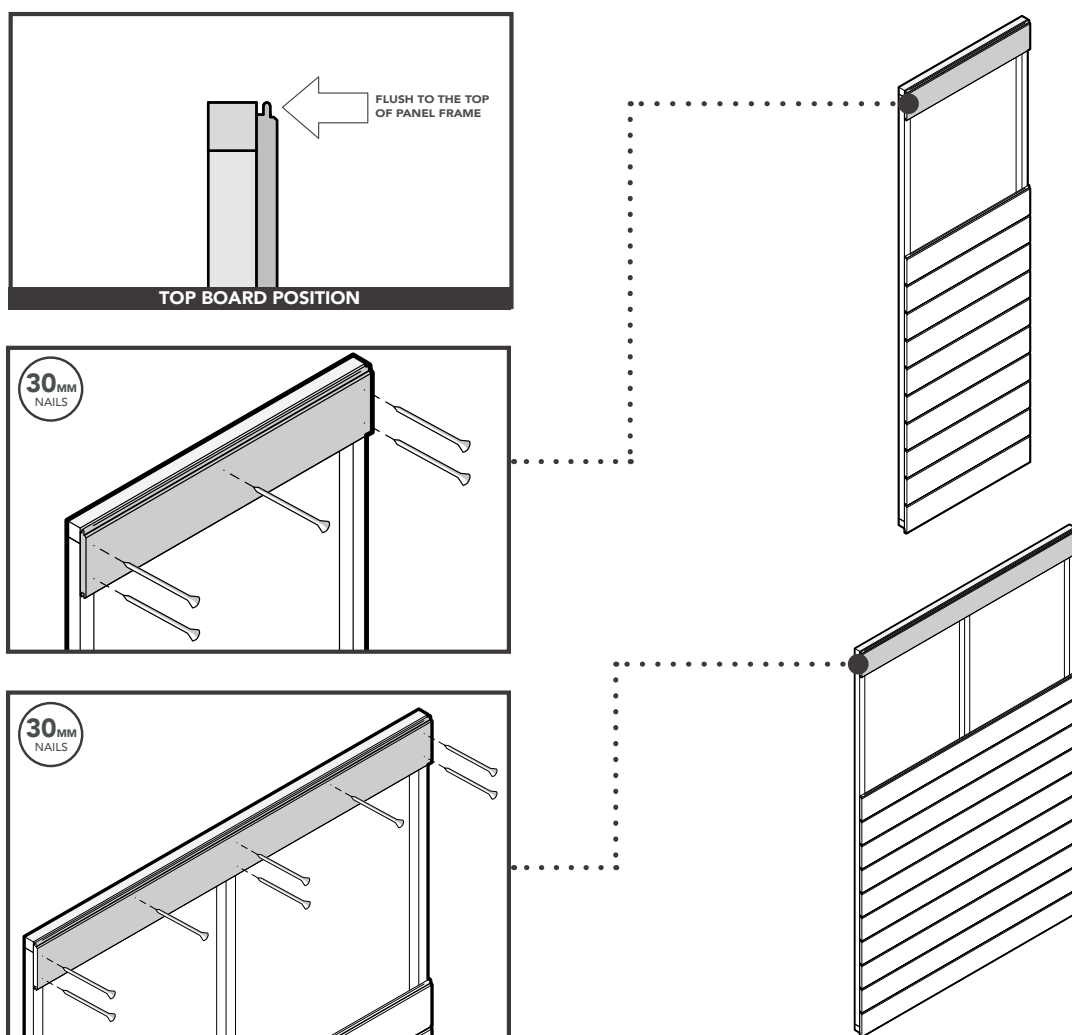


SECURE TOP BOARD

If not already done, Position the Top Board to the top of the Window Panel framework, ensuring it is flush as shown above. Secure the Top Board to the Window Panel framework behind with the nails provided.

2ft Top Board (121x12x590mm), 3ft Top Board (121x12x885mm), 4ft Top Board (121x12x1180mm)


STEP 2: WINDOW SILL ASSEMBLY

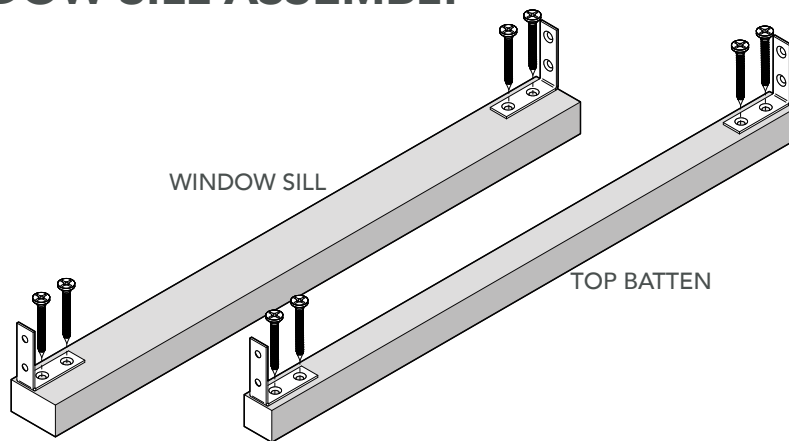

L - BRACKETS

Position and secure 2x L-Brackets at each end of the Window Sill and Top Batten, make sure they are flush to the long side, as shown above.


2ft Window Sill (45x28x534mm), 2ft Top Batten (28x28x534mm)
 3ft Window Sill (45x28x400mm), 3ft Top Batten (28x28x400mm)
 4ft Window Sill (45x28x548mm), 4ft Top Batten (28x28x548mm)

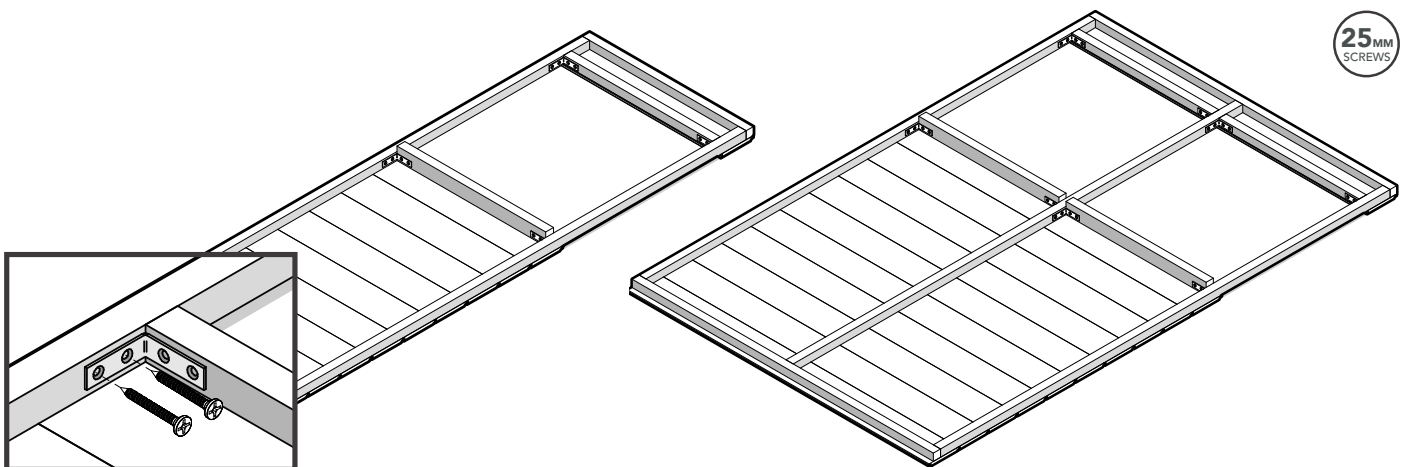


WINDOW SILL(S)

Position the Window Sill(s) flush to the top of the board in the window opening. **Secure the Window Sill(s) using the L-Brackets to the Window Panel framework. Use 4x 25mm screws per Window Sill.**

STEP 3: WINDOW COVER STRIPS

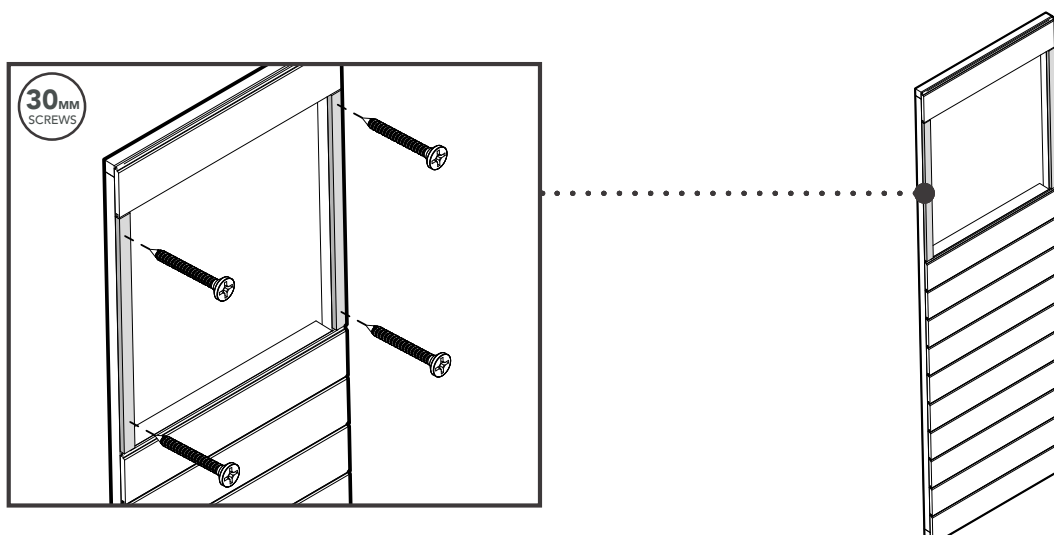



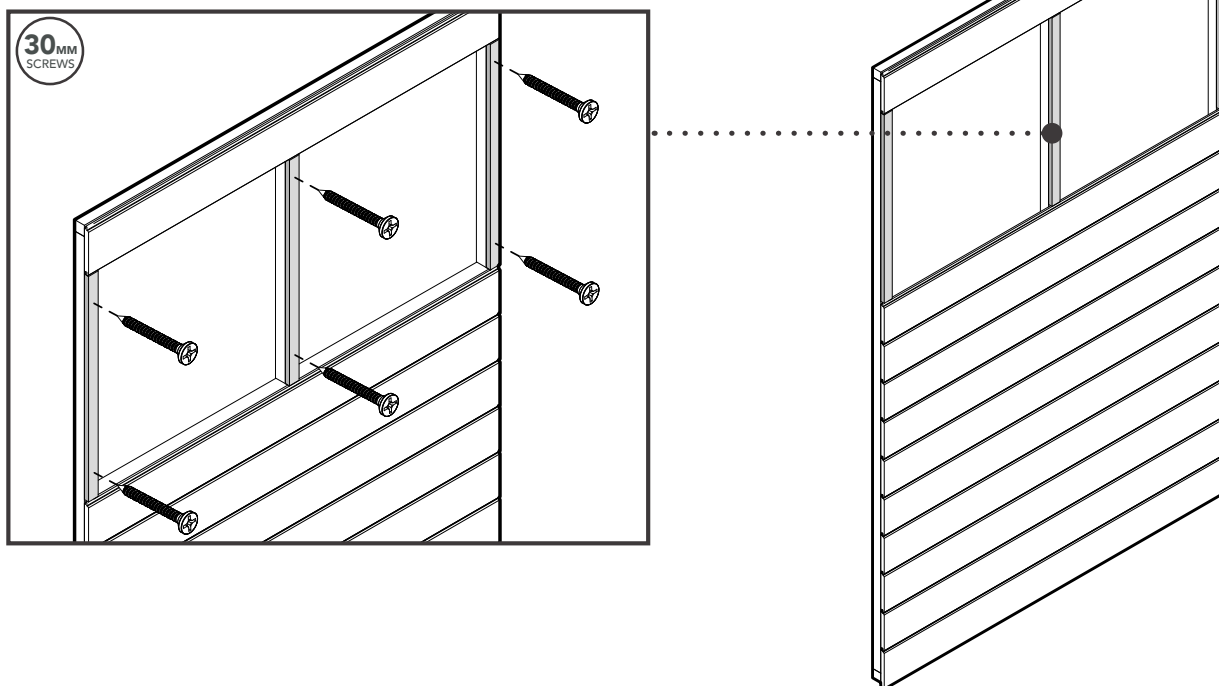


SECURE WINDOW COVER STRIPS

If not already done, position and secure the **Window Cover Strips** to the Window Panel framework. The double Window Panel will have a wider cover strip for the centre of the Window Panel as shown above. These will further hold the Window(s) in place.

Window Cover Strips (28x12x560mm)


STEP 4: OPENING WINDOW ASSEMBLY

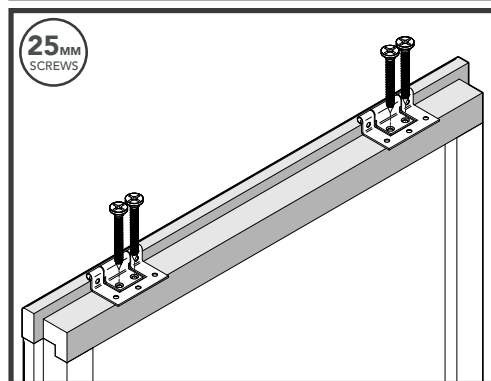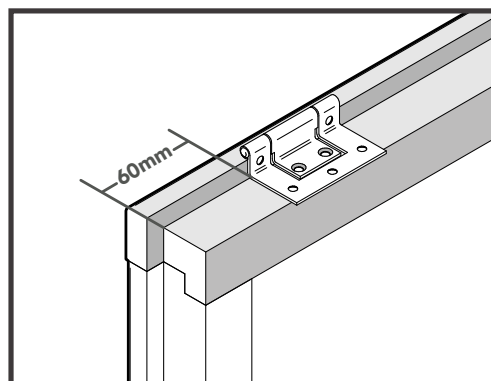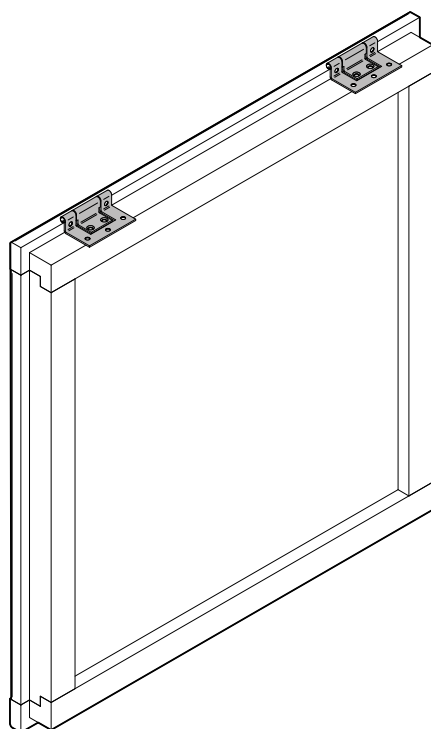

CRANKED HINGE

Attach the **Cranked Hinges** to the **Opening Window**. Use the measurement provided as a positioning guide. Ensure the pin on the hinges sit on the frame as shown above. Use **25mm screws** to secure.


STEP 6: INSTALLING OPENING WINDOW

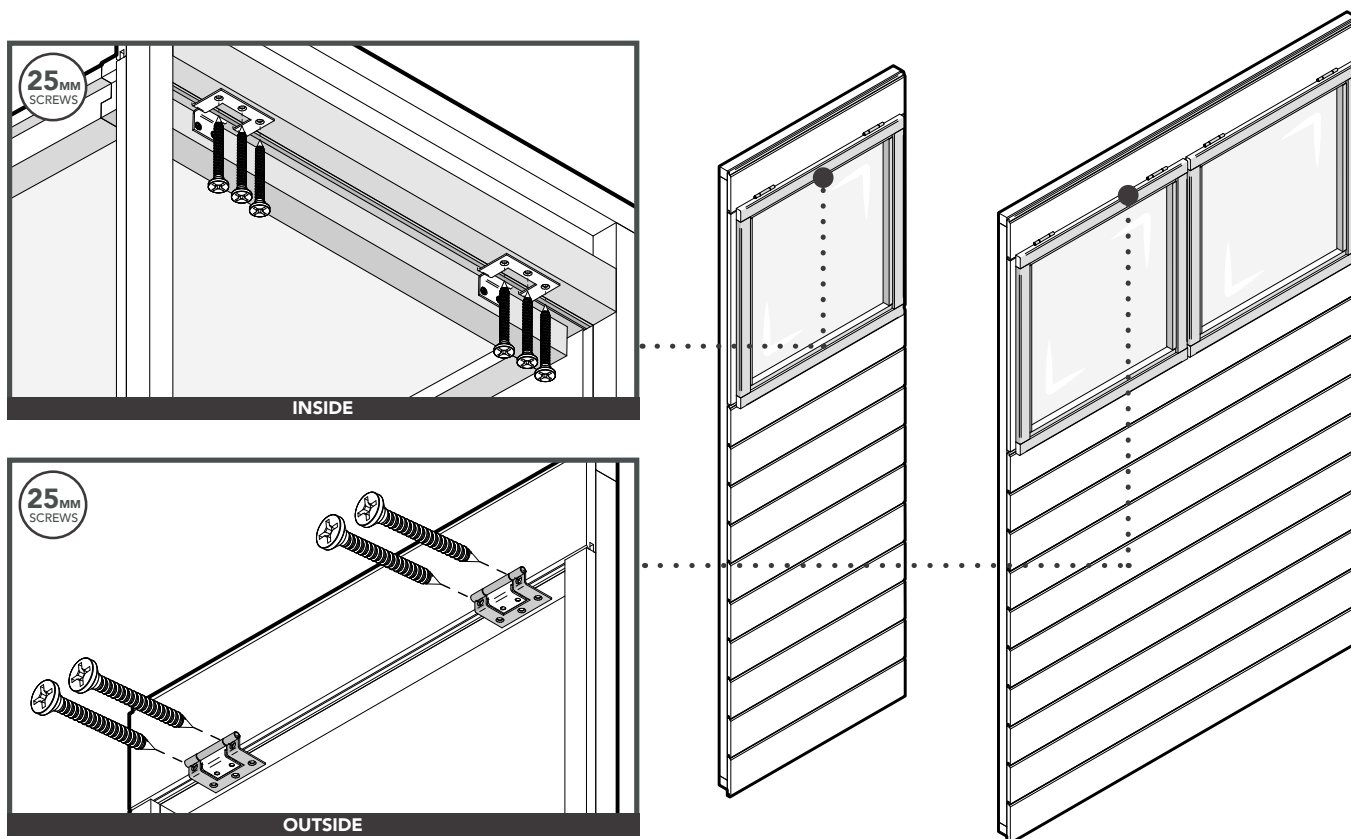

WINDOW INSTALLATION

Secure the Opening Window to the Top Window Sill. Ensure the pin on the hinges hook onto the board on the front of the Window Panel and the window can open easily before securing into place. Use 25mm screws.

STEP 7: CASEMENT STAY

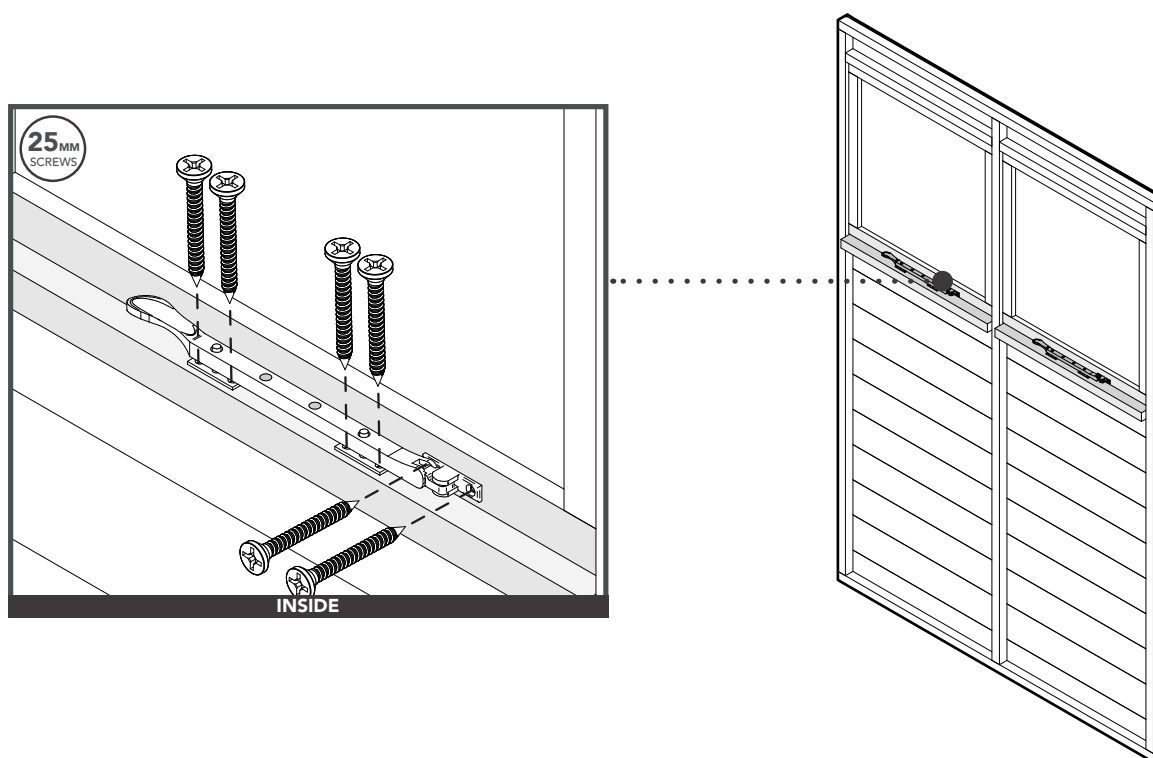

CASEMENT STAY

Secure the Casement Stay & Pins to the Opening Window and Window Sill. Secure the Casement Stay and use it to position the pins underneath. Mark out first to ensure they align and the Pins are flush to the edge.

SIDE PANEL ASSEMBLY

FIXING PACK CONTAINS:

FIXING PACK CODE: SHEDPANELSFP






5 x **60mm** Screws
QTY: 3




4 x **50mm** Screws
QTY: 52



4 x **40mm** Screws
QTY: 2

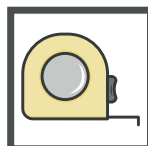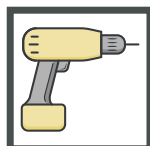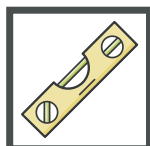


STEP 1: SIDE PANEL ASSEMBLY

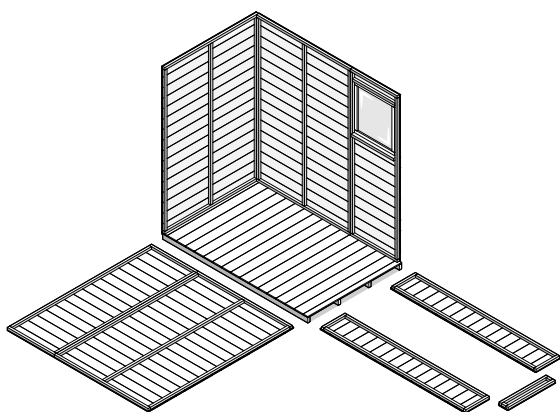


LAY OUT YOUR PANELS

Lay out the panels around your shed Floor(s) to your desired panel configuration. Use your **floor plan** to confirm panel positions.

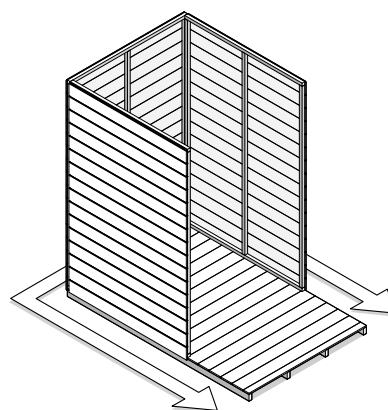


WORK FROM BACK TO FRONT

We recommend starting in a back corner and then **work from the back panels to the front panels for assembly.**

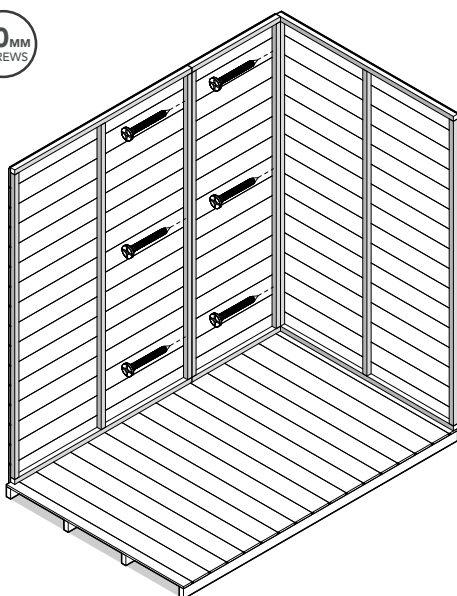

SECURE PANELS TOGETHER

Use your floor plan to confirm the corner panel positions. **Position and secure the Side Panels together.** Ensure the bottom batten on the Side Panels sit on the Floor and the bottom board is up against the Floor edge.

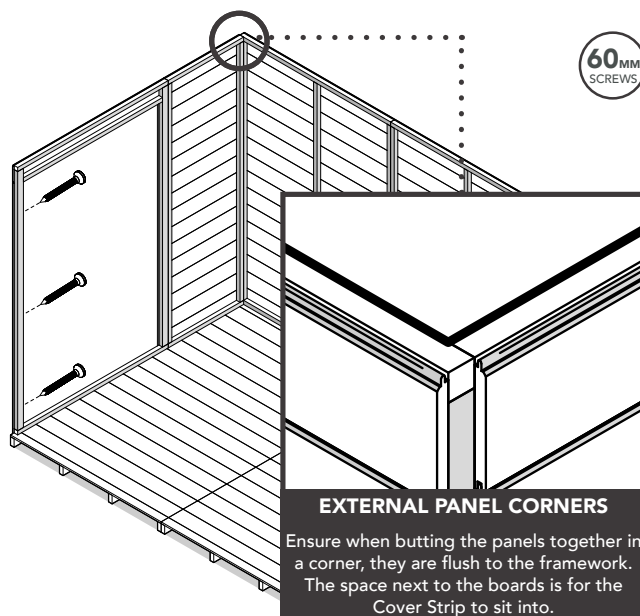







EXTERNAL PANEL CORNERS

Ensure when butting the panels together in a corner, they are flush to the framework. The space next to the boards is for the Cover Strip to sit into.

SECURING THE DOUBLE DOOR PANEL

For securing the Double Door Panel to a corner, use the 60mm screws as shown above. Use 50mm screws for securing all of the other panels together.



STEP 2: SECURE SIDE PANELS TO FLOOR(S)

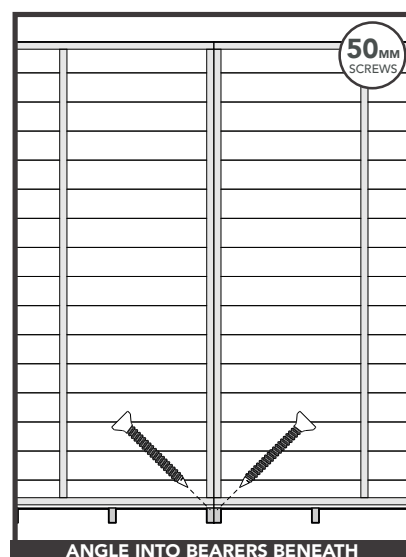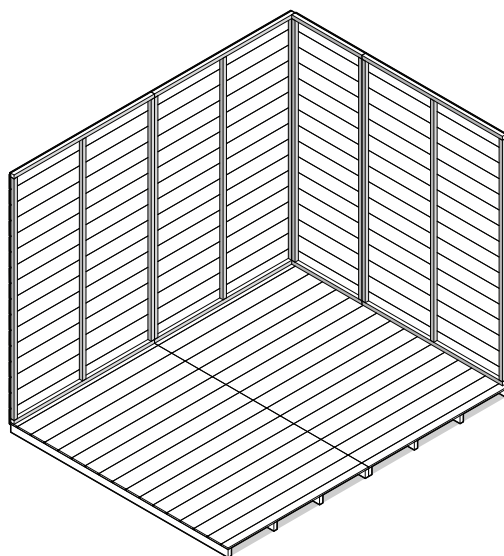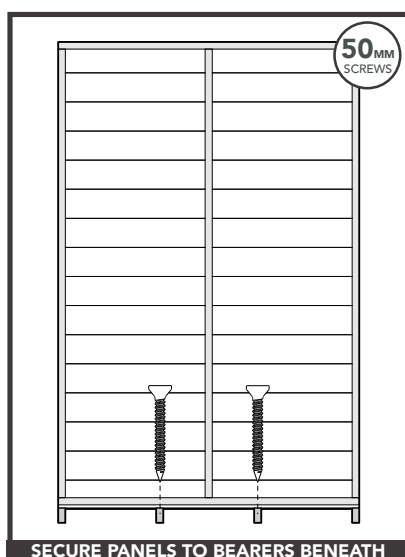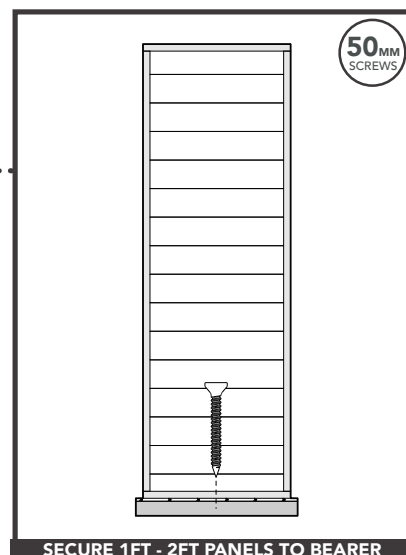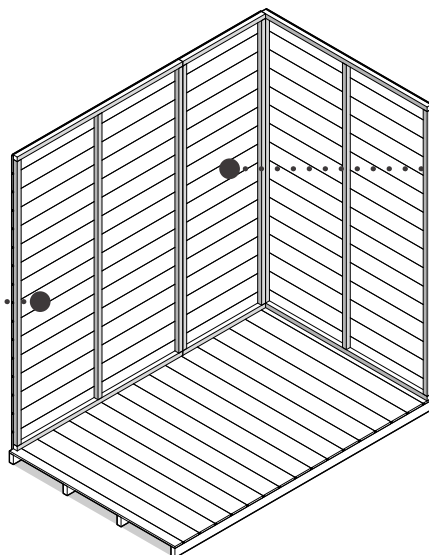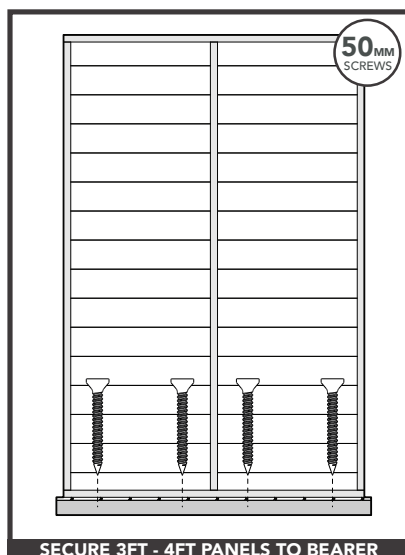

SECURE TO FLOOR BEARERS/FLOORBOARD BENEATH

Secure the Side Panels to the Floor(s) by **screwing into the floor bearers beneath** (50mm screws).
Secure the Side Panels to the floorboards if there are no bearers beneath (40mm screws).

STEP 3: SECURE DOOR PANEL TO FLOOR

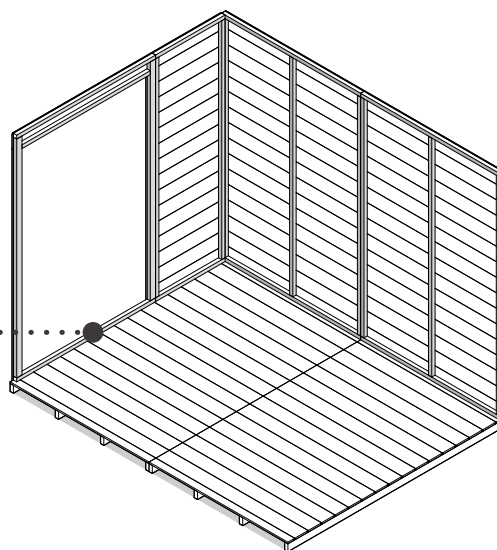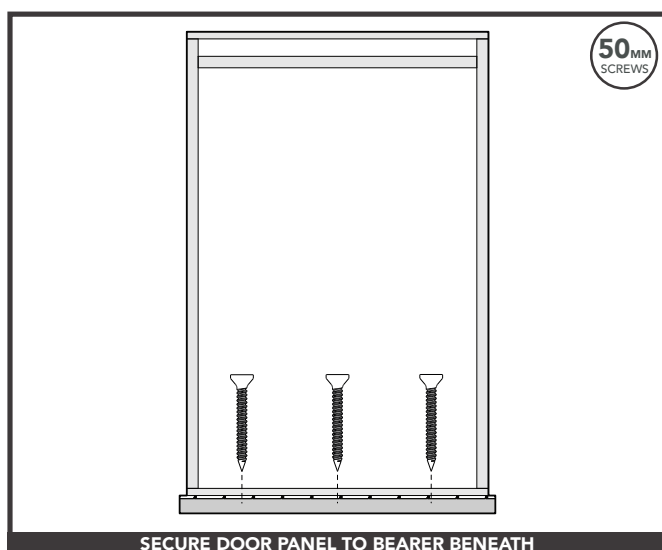

SECURE TO FLOOR BEARERS/FLOORBOARD BENEATH




Secure the Door Panel to the Floor by **screwing into the floor bearers beneath** (50mm screws).
Secure the Door Panel to the floorboards if there are no bearers beneath (40mm screws).

APEX SECTION ASSEMBLY


FIXINGS NEEDED:





4 x 50mm Screws
QTY: 10

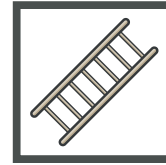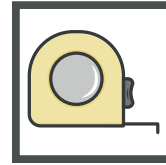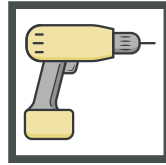


STEP 1: APEX SECTION ASSEMBLY

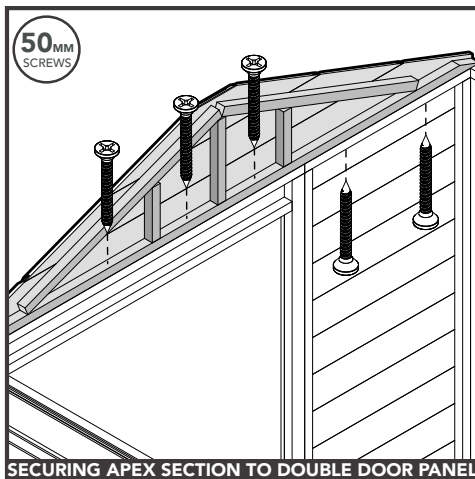

APEX SHEDS

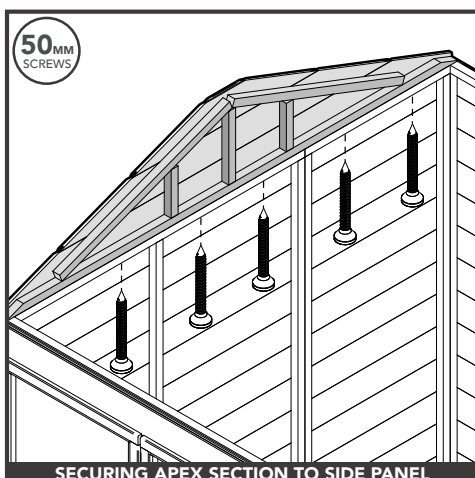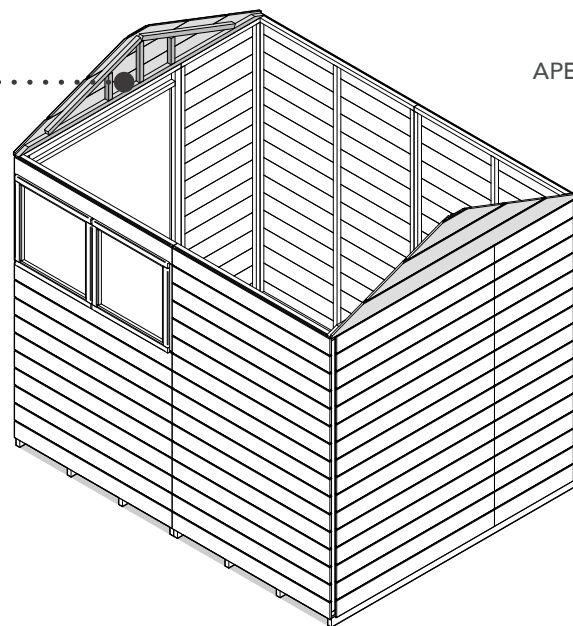

REVERSE APEX SHEDS

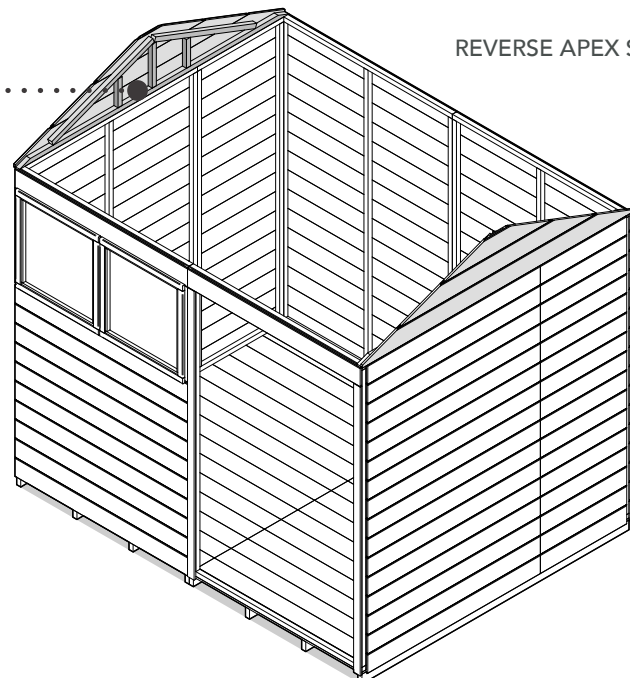

APEX SECTIONS

Position and secure the Apex Sections to the Side Panels as shown above. For an apex shed, secure the Apex Sections to the front and back of your shed. For a reverse apex shed, secure the Apex Sections to the sides of your shed.

COVER & DOOR STRIPS



FIXINGS NEEDED:





3.5 x 30mm Screws
QTY: 66



4 x 50mm Screws
QTY: 8

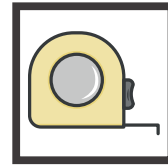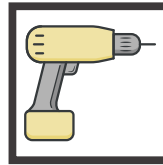

STEP 1: DOOR BATTENS


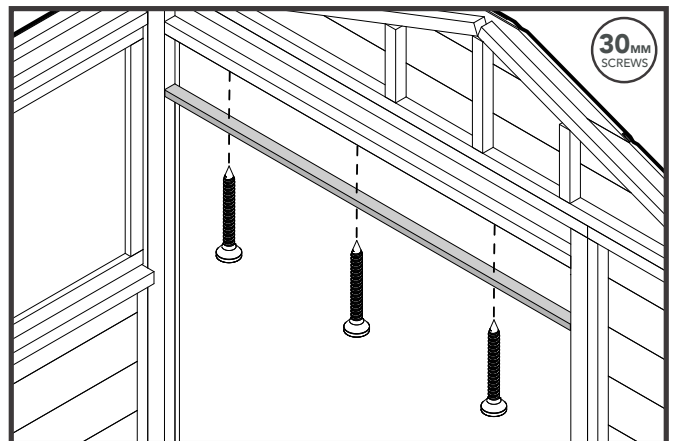
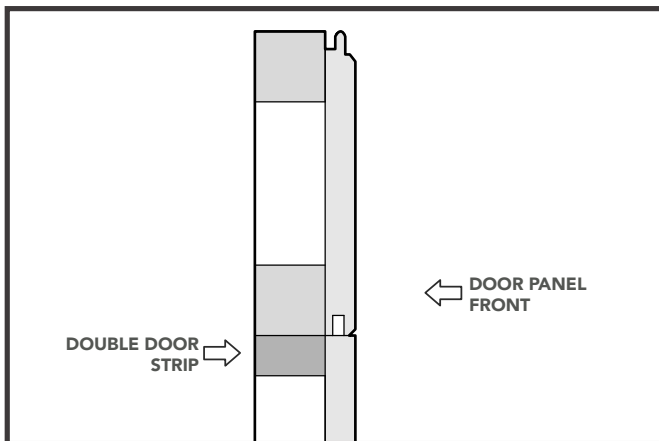


DOUBLE DOOR STRIP

Position and secure the Double Door Strip to top top of the door opening. Ensure it is flush to the inside edge of the batten above on the Double Door Panel.

Double Door Strip (28x16x1088mm)

STEP 2: DOOR STRIPS

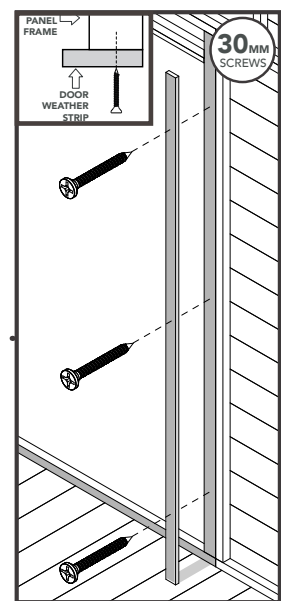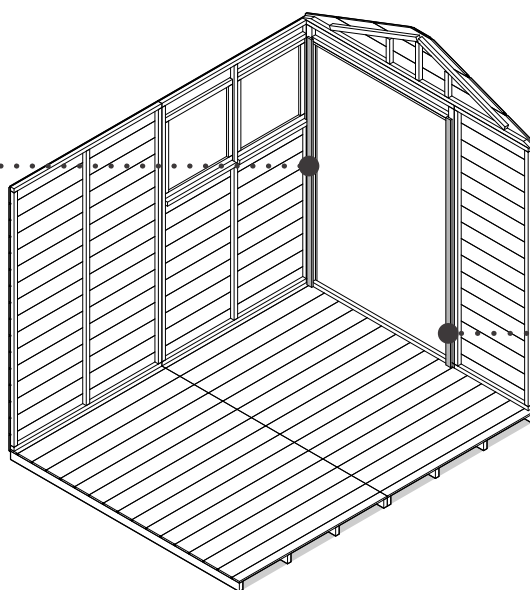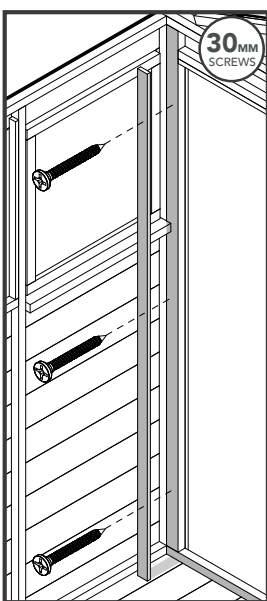


DOOR WEATHER STRIPS

Secure the Door Weather Strips to the Door Panels framework, and ensure they are flush to the Floor and against the face of the Door Panel framework. Ensure there is approximately a 10mm overhang into the door opening. If due to the panel configuration, your Door Panel framework is partly hidden, secure the Door Weather Strip to the visible framework.

Door weather strip (38x12x1710mm)

STEP 3: COVER STRIPS

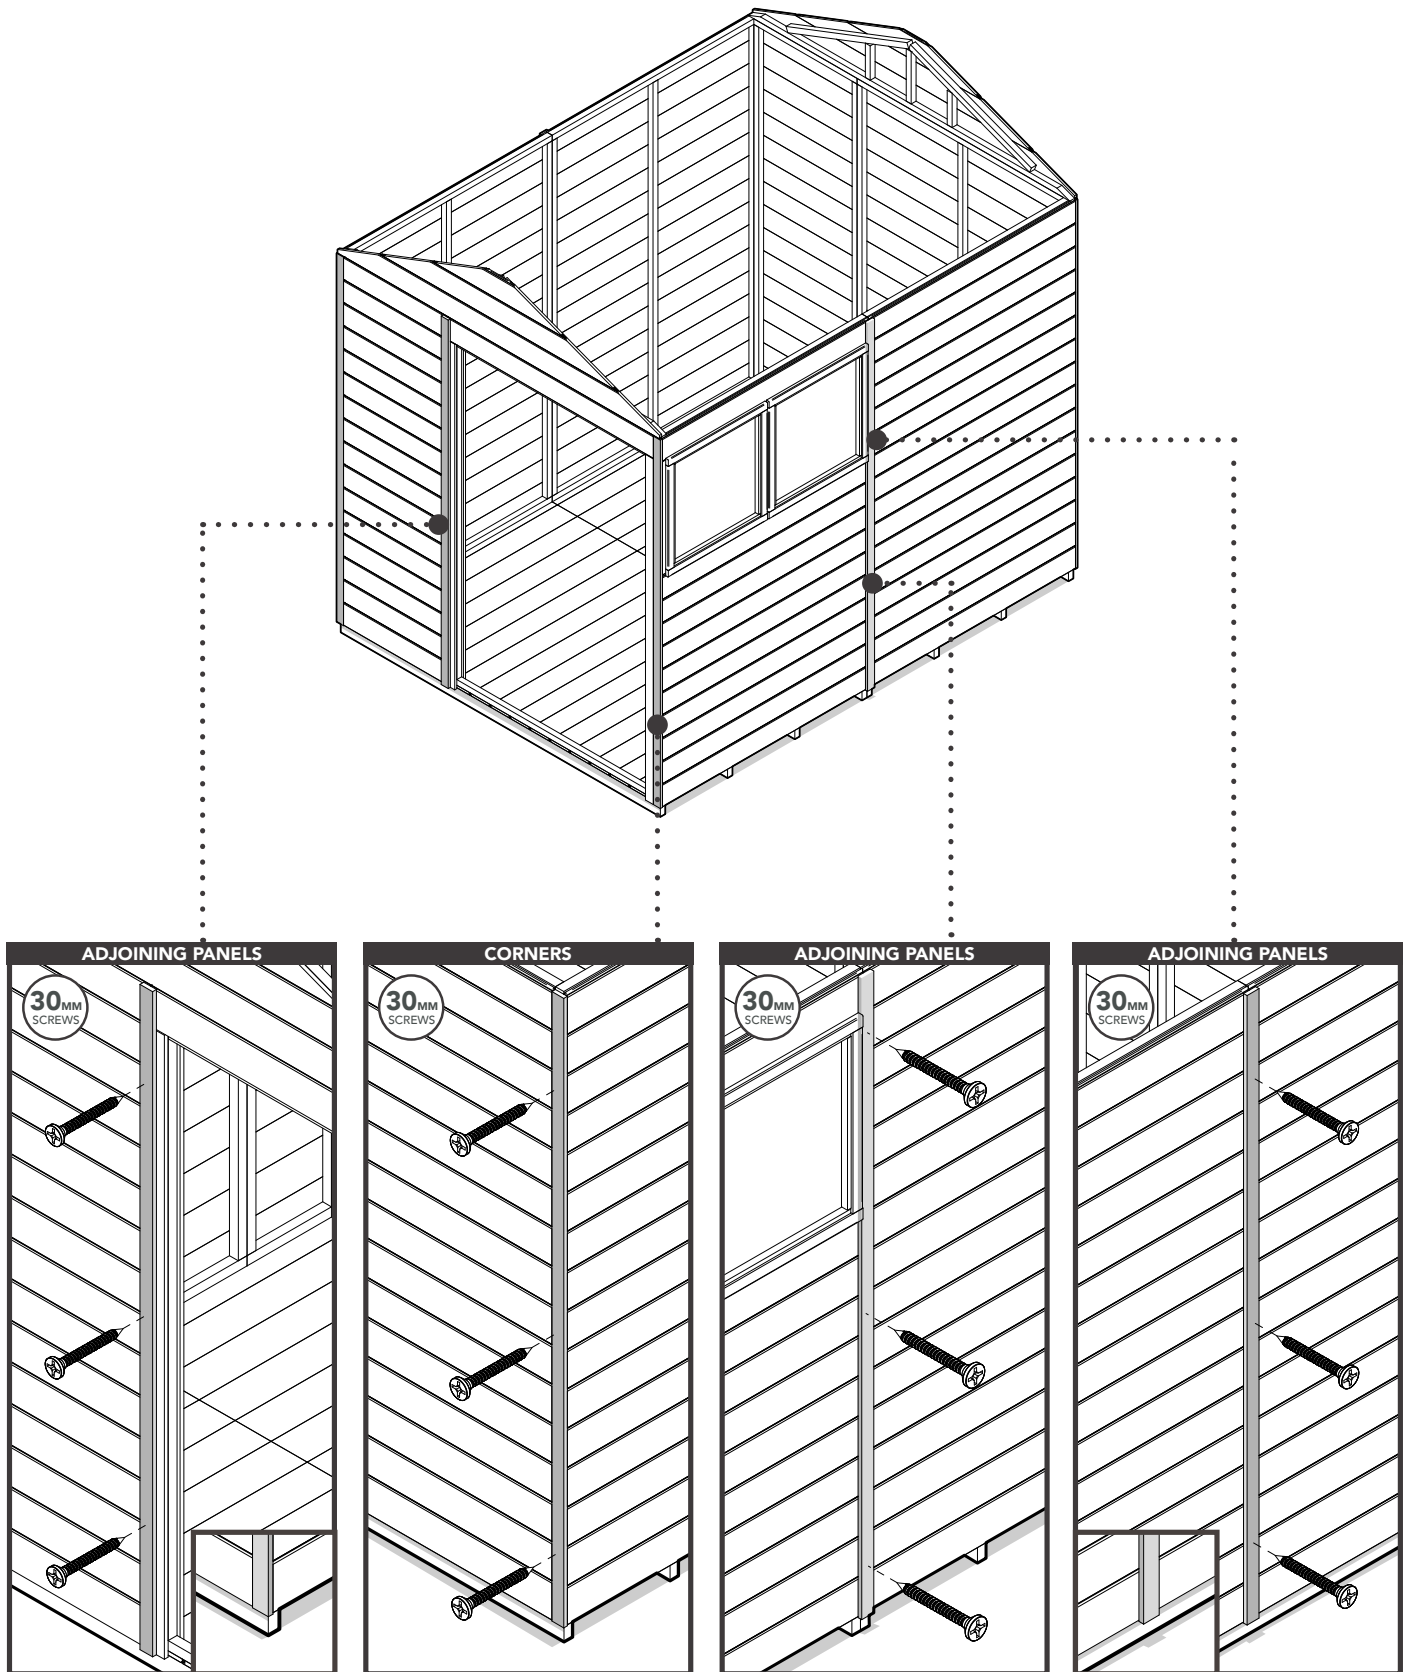

COVER STRIPS

Secure the Cover Strips to the corners and adjoining panels. Ensure they are flush to the bottom edge of the panels. Make sure to secure the Cover Strips to the framework behind and not into the joins of the panels.


Cover Strips (28x12x1823mm)

TRUSS ASSEMBLY

FIXINGS NEEDED:



5 x 80mm Screws
QTY: 8





5 x 70mm Screws
QTY: 8






4 x 50mm Screws
QTY: 4



3.5 x 25mm Screws
QTY: 24

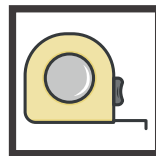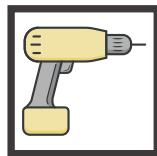


STEP 1: TRUSS BLOCKS

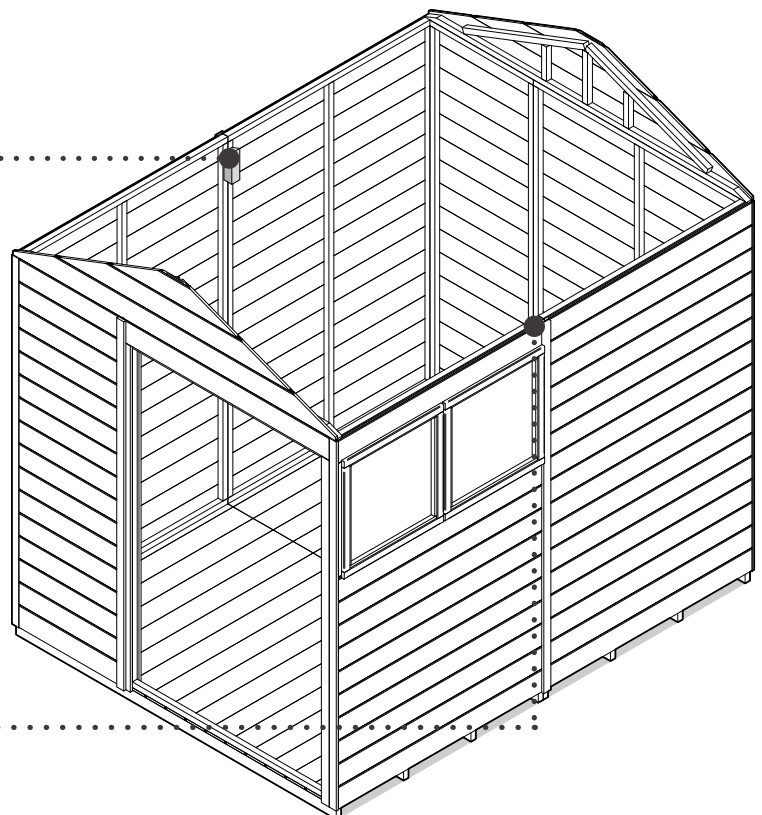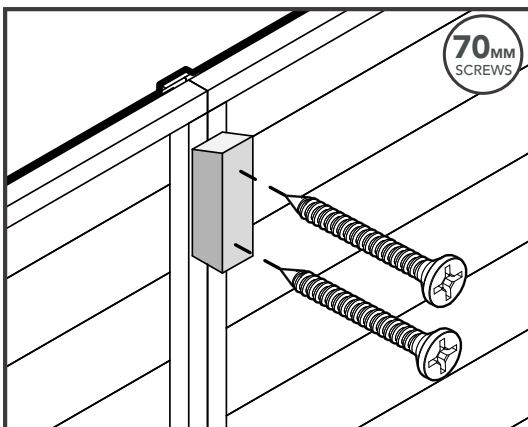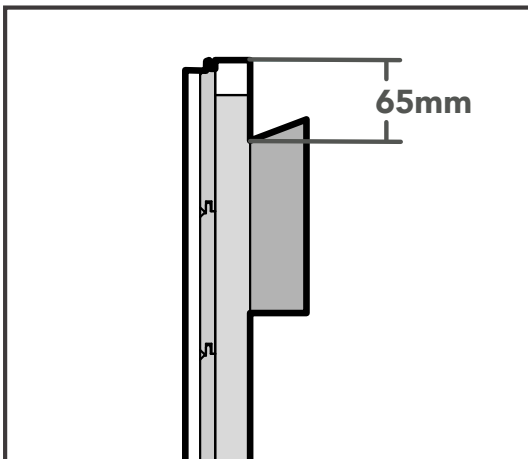

TRUSS BLOCK

Using the dimensions above, position and secure the Truss Blocks on each side of the shed ensuring they are central to the framework of the adjoining panels as shown above.


STEP 2: TRUSS ASSEMBLY

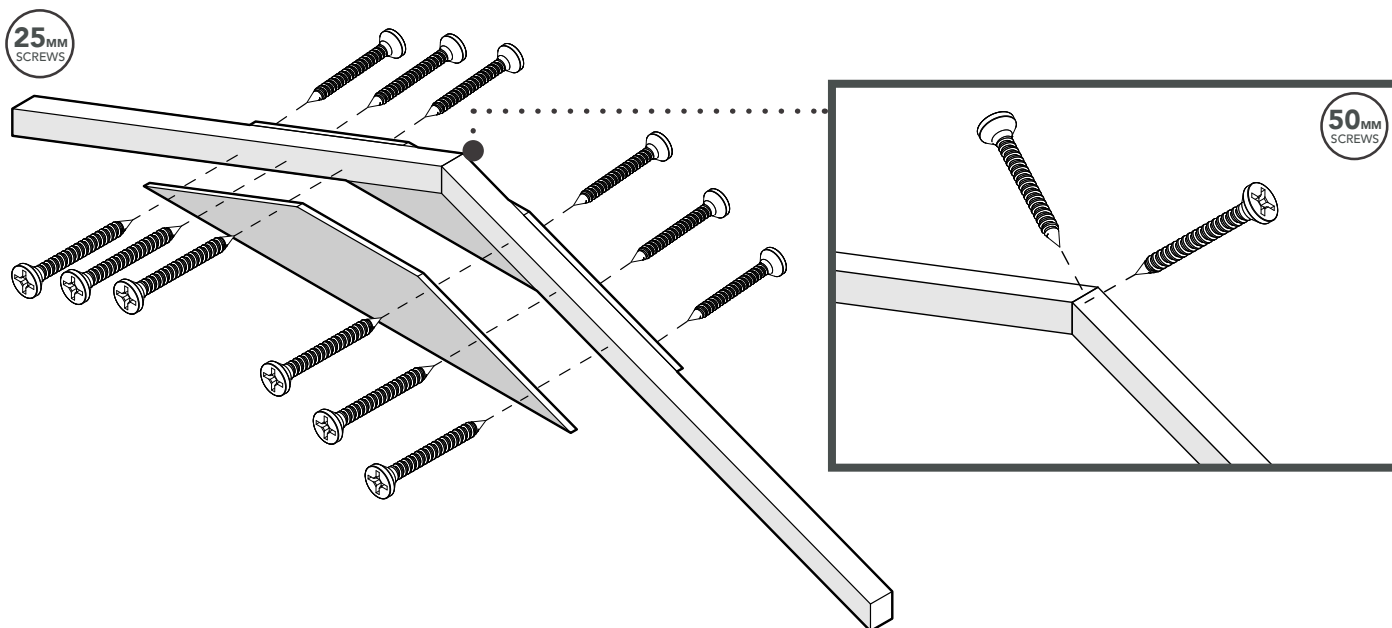

TRUSS ASSEMBLY

Assemble the Truss as shown above. Line up the angled edge of the truss brace against the long side of the truss battens, secure using 6 x 25mm screws on each side.

STEP 3: SECURE THE TRUSS

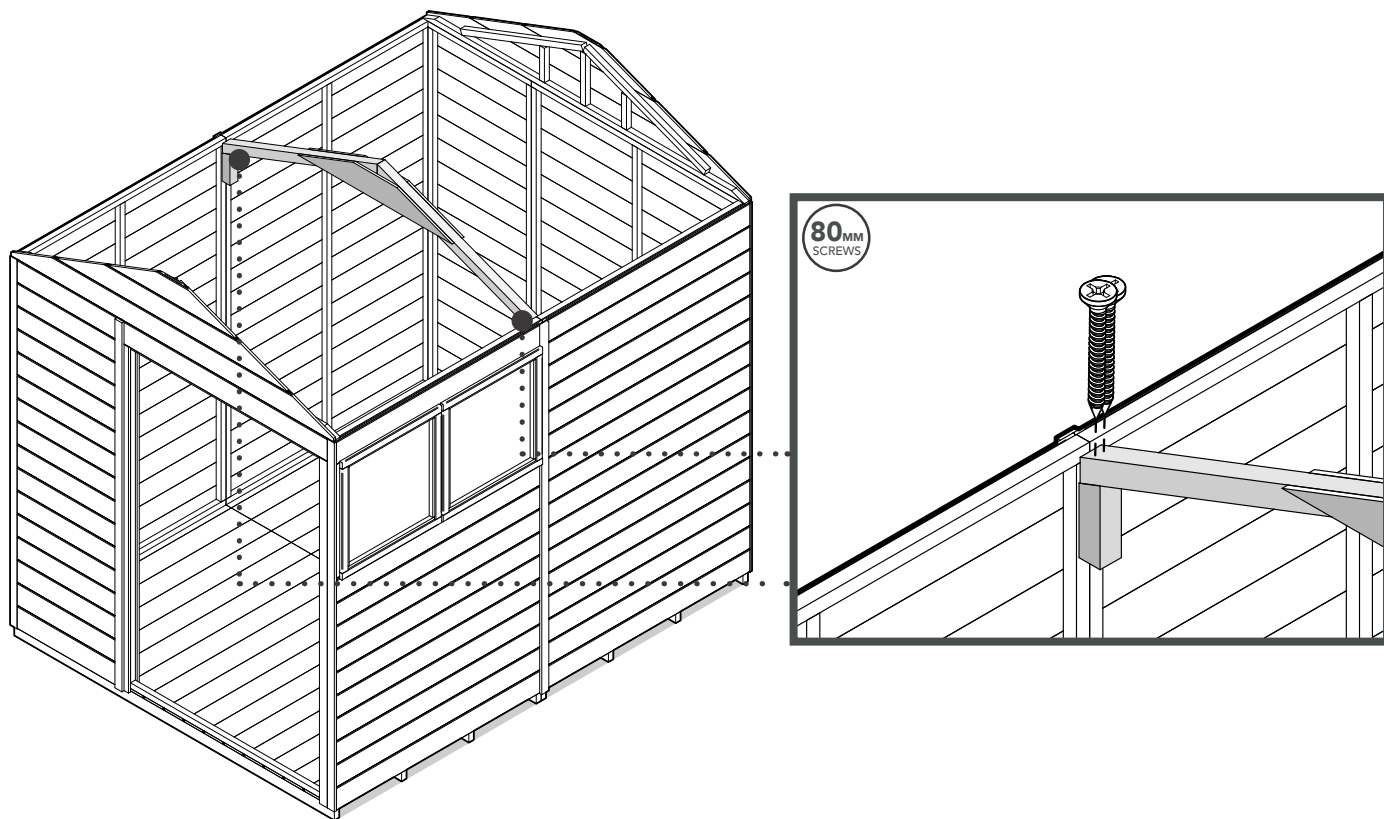


SECURING THE TRUSS

Position the Truss on to the top of the Truss Block, making sure it is flush. Secure the truss using 80mm screws.

ROOF ASSEMBLY


FIXINGS NEEDED:




5 x **70mm** Screws
QTY: 16





4 x **50mm** Screws
QTY: 44



4 x **40mm** Screws
QTY: 24






Felt Tacks
QTY: 145

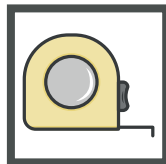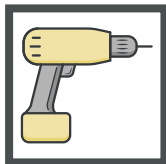

Go to step 5 for 7x7 Sheds

STEP 1: POSITIONING THE ROOF

Only for 6x8 & 6x10 Shed

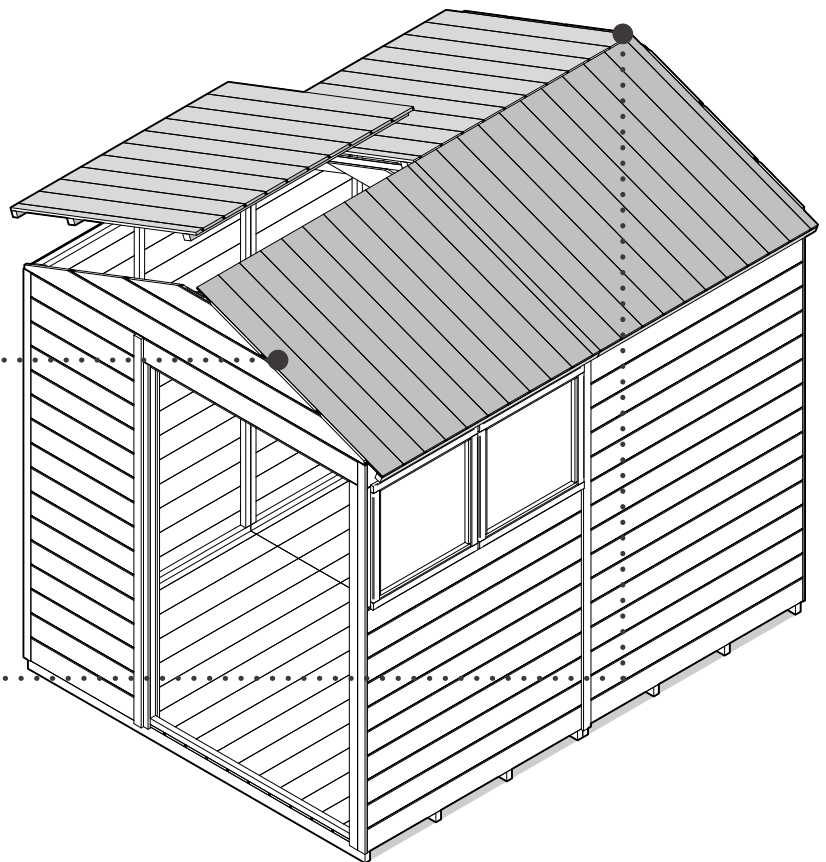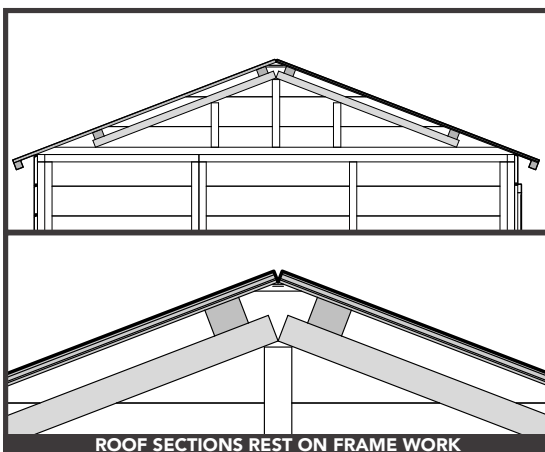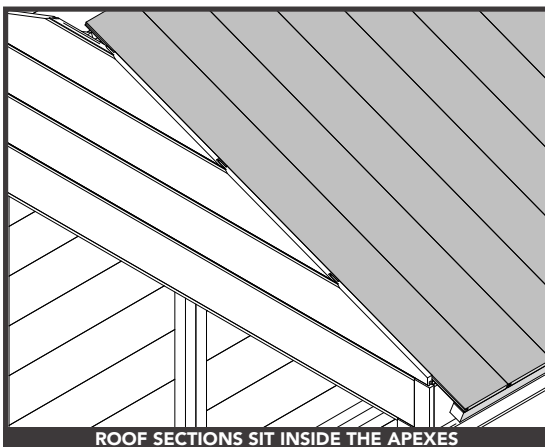


POSITIONING THE ROOF

Using the above, position the Roof Sections on to the shed, ensuring they sit inside Apex Sections and rest on the Apex Sections framework as shown above.

STEP 2: SECURING ROOF

Only for 6x8 & 6x10 Shed

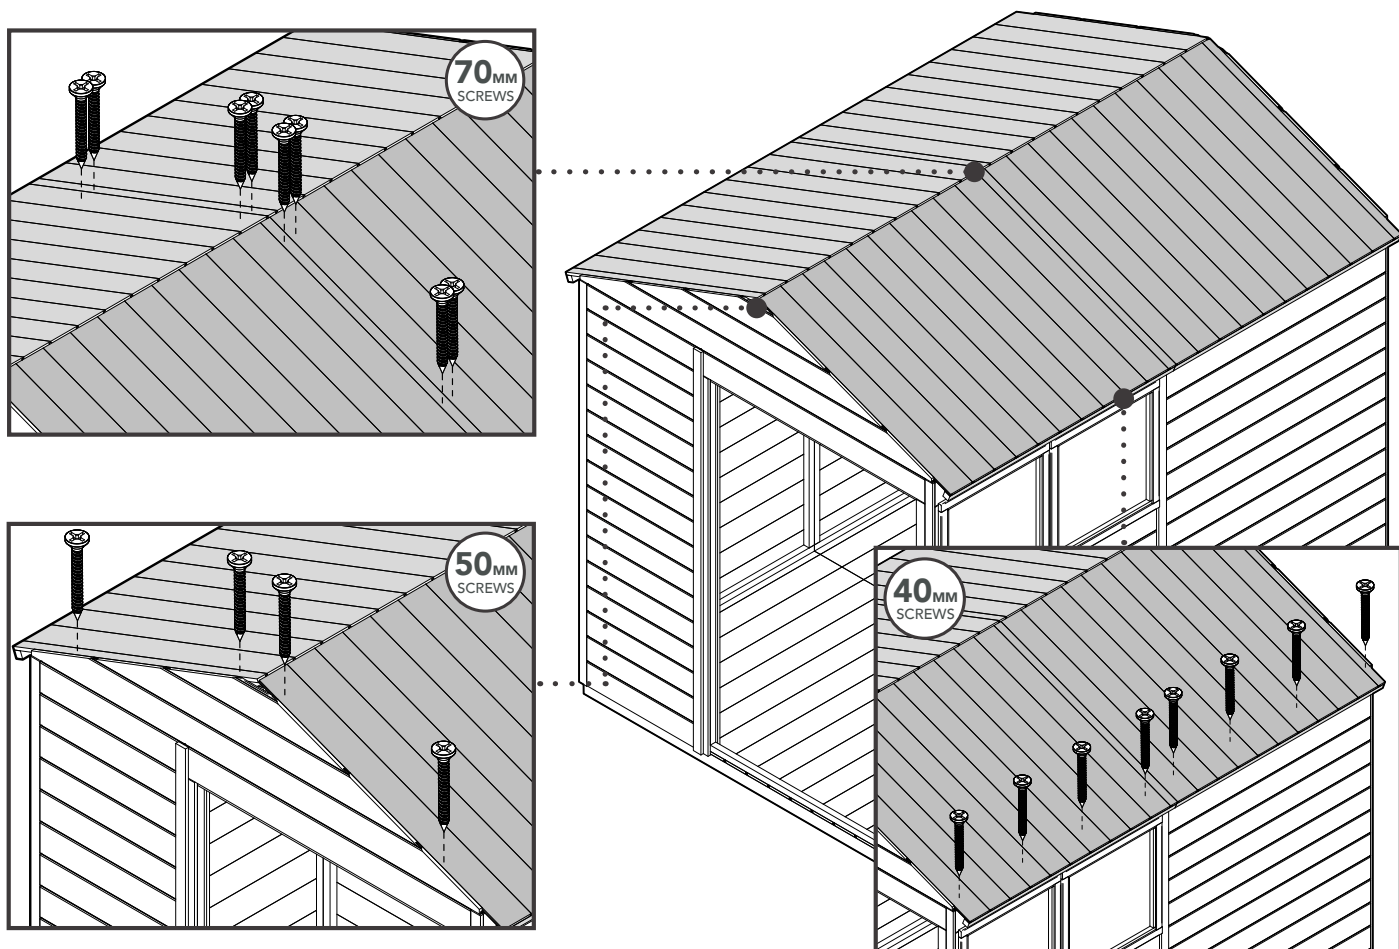


SECURING ROOF

working from the back Secure the Roof Sections to the Apex Sections frame work and the truss'. Secure into Side Panels frame work using 4x 40mm screws for each side.

STEP 3: APEX BATTENS

Only for 6x8 & 6x10 Shed

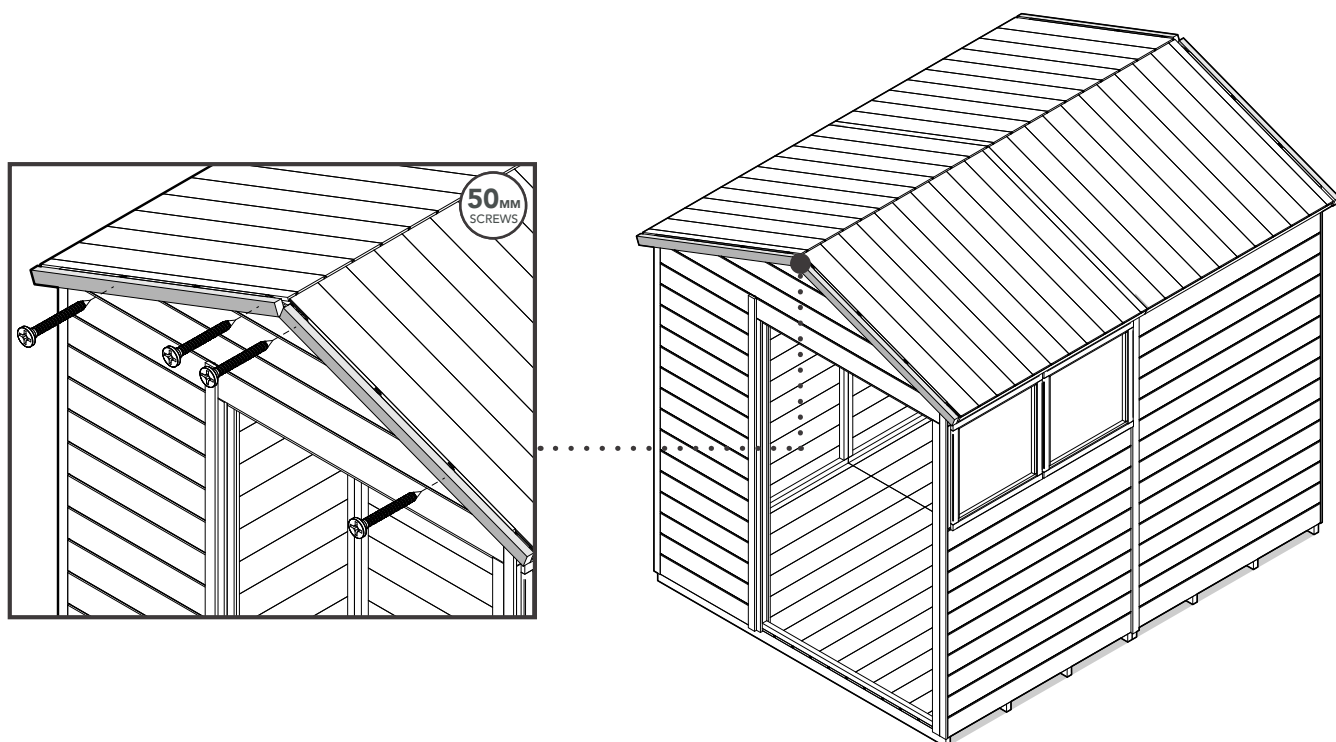


APEX BATTENS

Position & secure the Apex Battens to the Apex Sections, Ensure they are flush to the top and ends of the Roof Section, as shown above. make sure to screw in to the frame work behind.

STEP 4: FELT

Only for 6x8 & 6x10 Shed

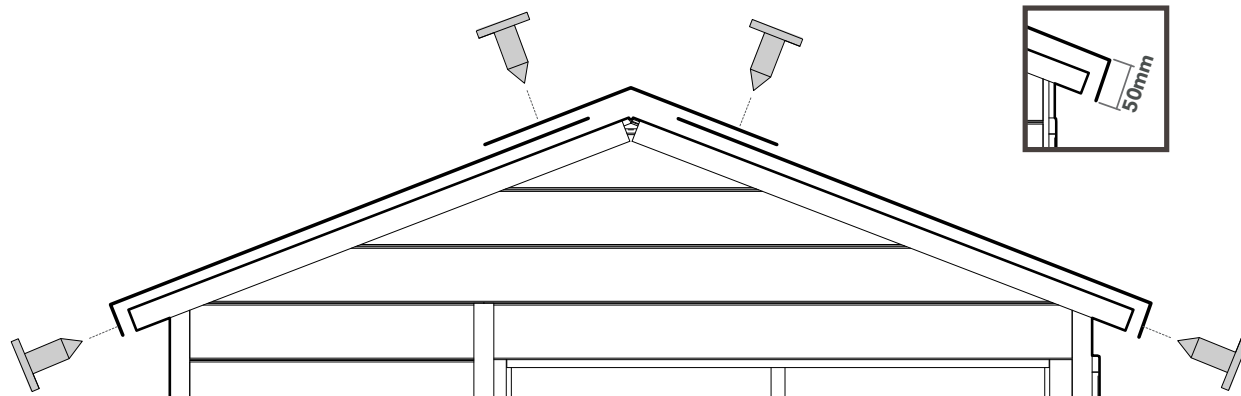


3 x FELT PIECES

Measure out 3 equal lengths, cut with a sharp knife, overlap them on top, around the edges and fold the corners; tack to keep secure. Ensure there is a 50mm overhang at the bottom and work from the bottom to the top. Hammer the tacks into the felt at 150mm intervals.


Once Done, Go to Fascias and finals section

STEP 5: ROOF INFILL SECTIONS


Only for 7x7 Shed

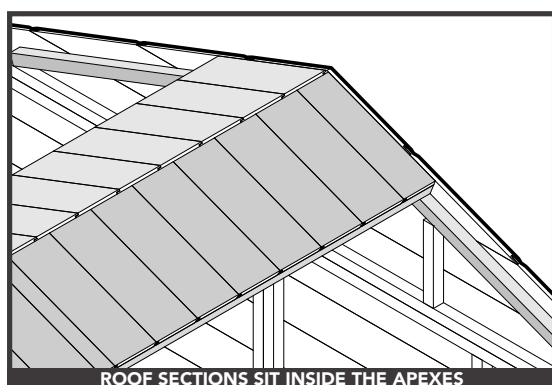

ROOF SECTIONS SIT INSIDE THE APEXES

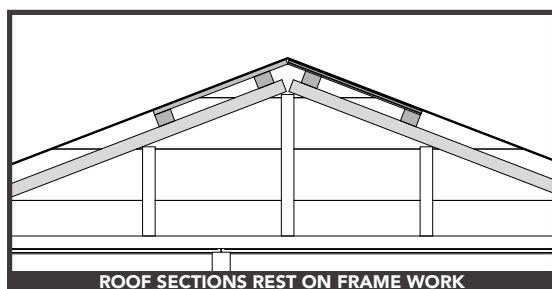




ROOF SECTIONS REST ON FRAME WORK

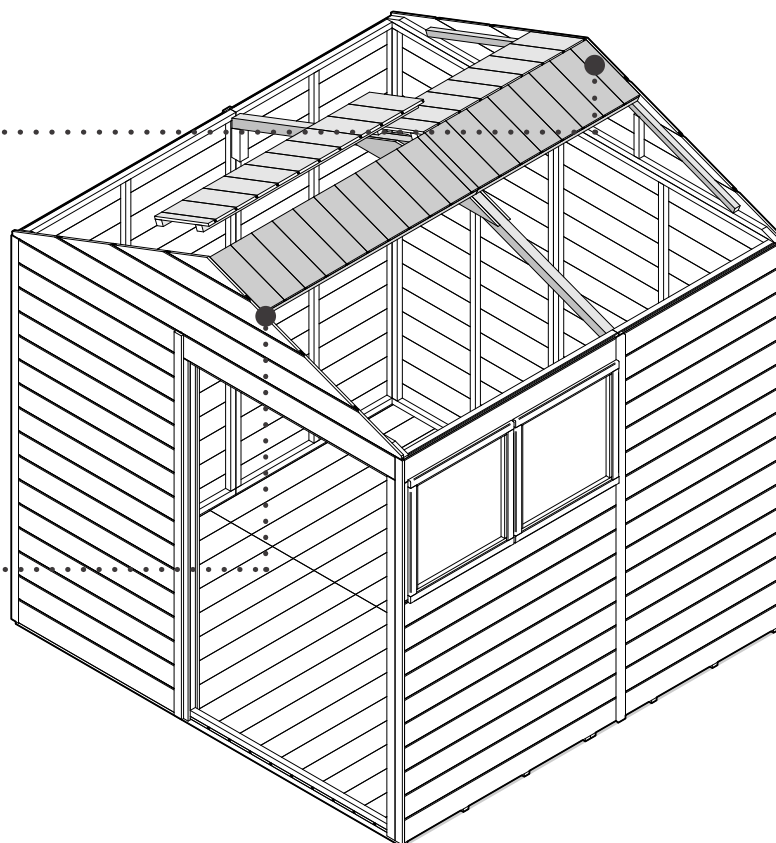

POSITIONING ROOF INFILL SECTIONS

Position the Roof Insert Sections on to the top of the apexes and the truss. Make sure the Roof sections sit on the Truss assembly and the frame work of the apex sections, as shown above.

Only for 7x7 Shed

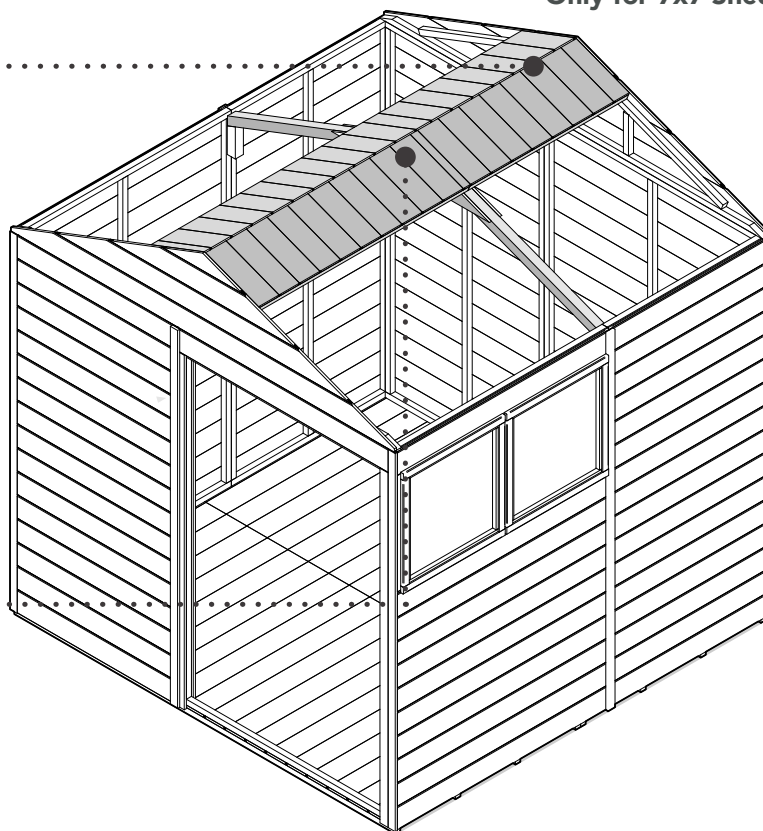
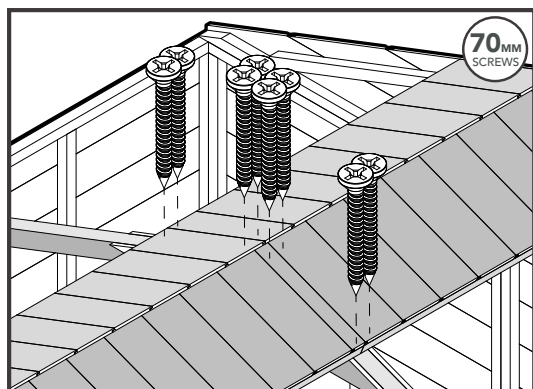
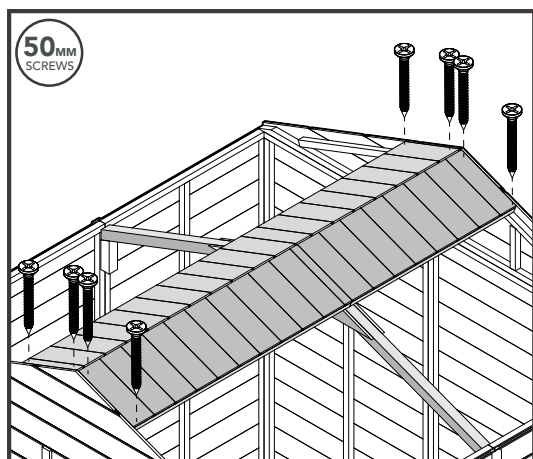


SECURING ROOF INFILL SECTIONS

Secure the Roof Insert Sections the apexes and the truss as shown above.




STEP 7: ROOF SECTIONS

Only for 7x7 Shed

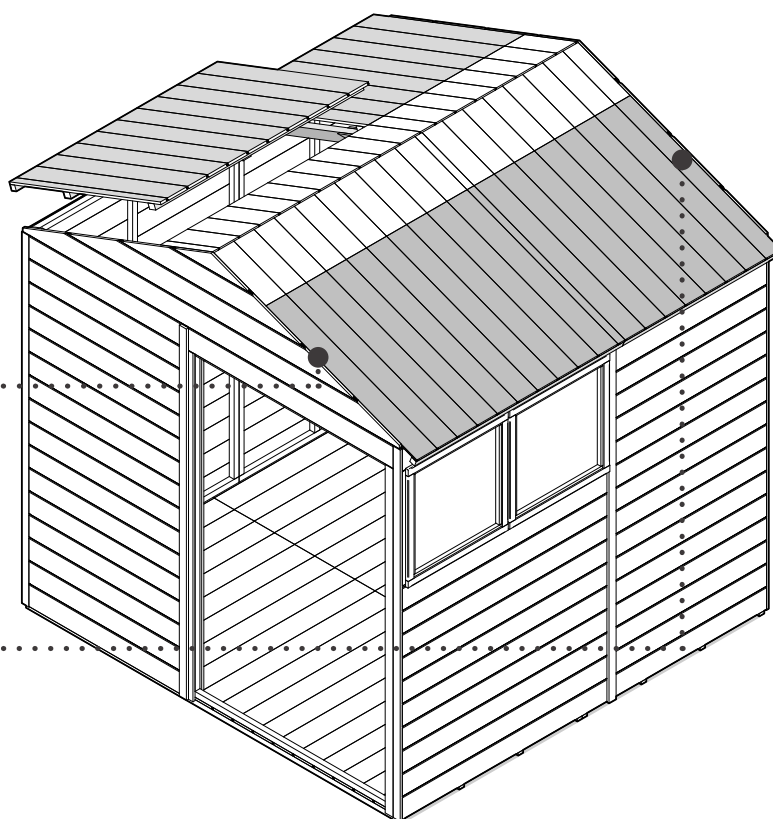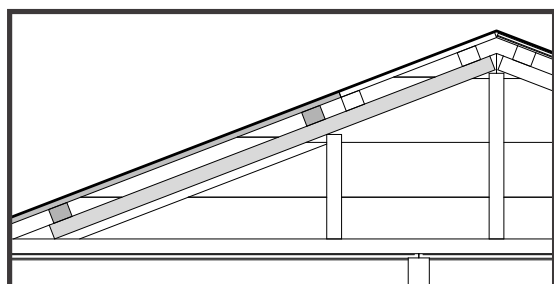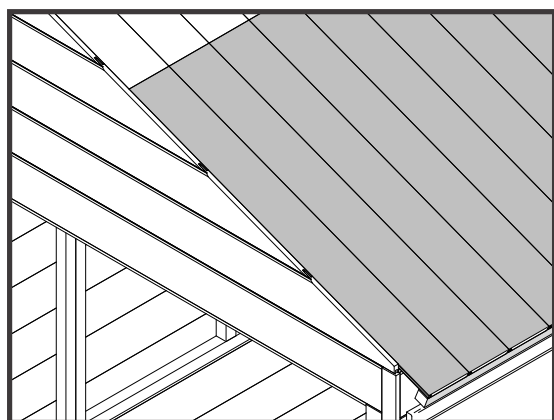

POSITIONING ROOF SECTIONS

Position the Roof Insert Sections on to the apexes and the truss and pushed up against the roof insert sections as shown. Make sure the Roof sections sit on the Truss assembly and the frame work of the apex sections.

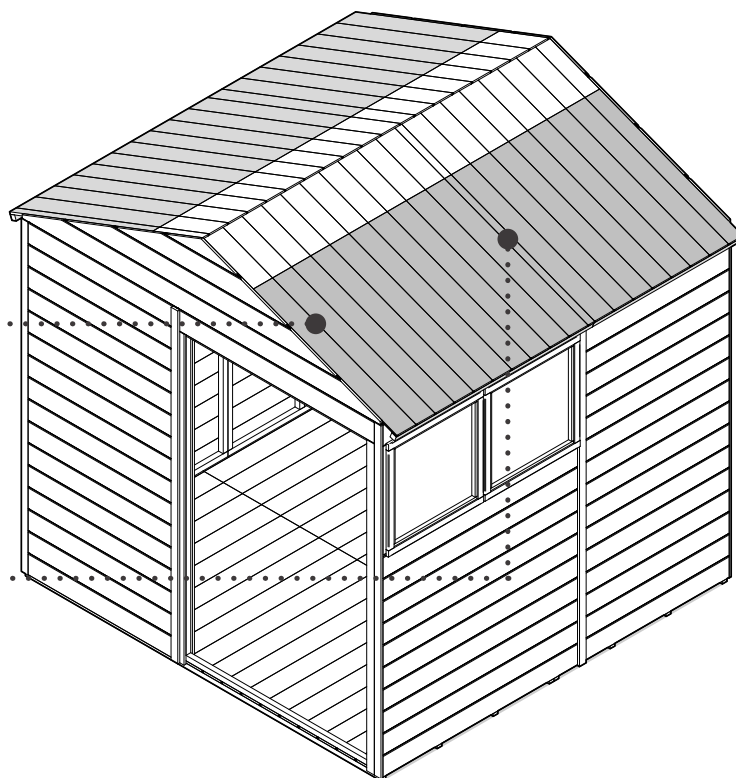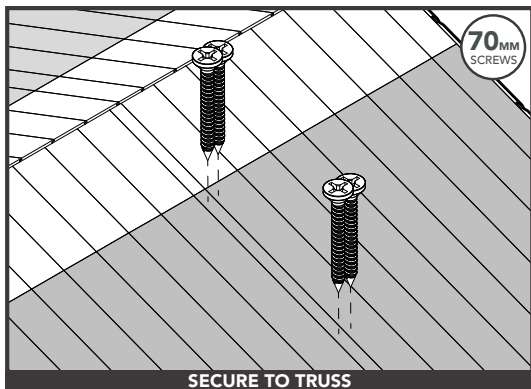
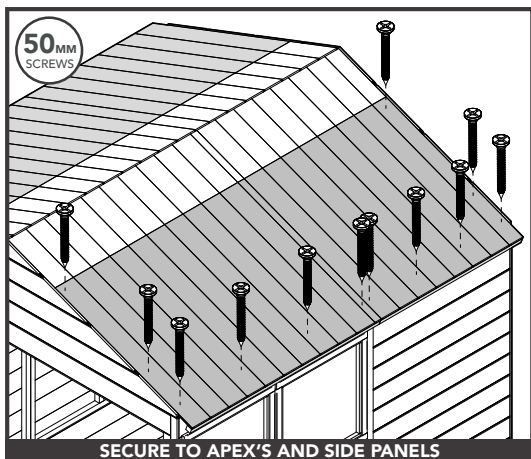


SECURING ROOF INFILL SECTIONS

Secure the Roof Insert Sections the apexes, side panel and the truss as shown above.

STEP 6: APEX BATTENS


Only for 7x7 Shed

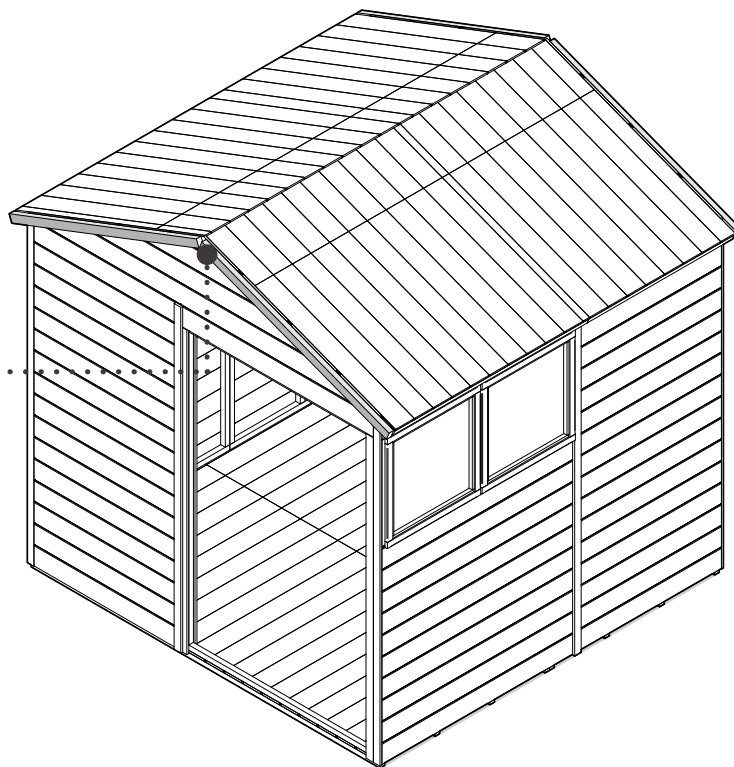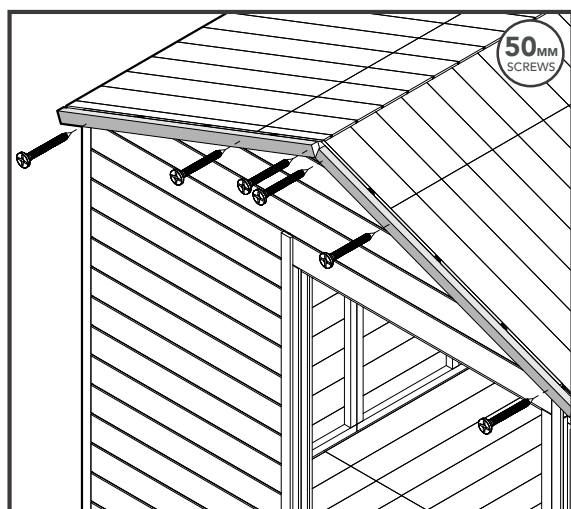

APEX BATTENS

Position & secure the Apex Battens to the Apex Sections, Ensure they are flush to the top and ends of the Roof Section, as shown above. make sure to screw in to the frame work behind.

STEP 7: FELT ROOF SECTIONS

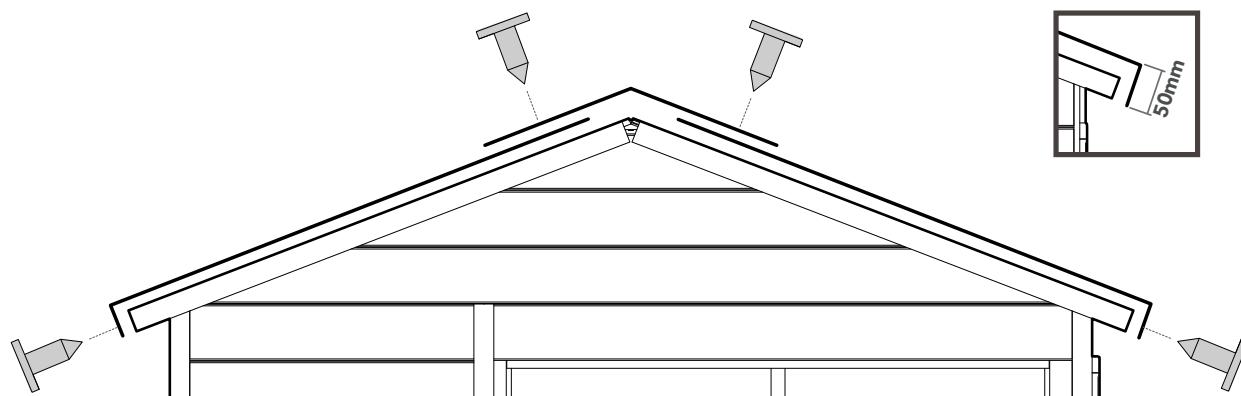

3 x FELT PIECES

Measure out 3 equal lengths, cut with a sharp knife, overlap them on top, around the edges and fold the corners; tack to keep secure. Ensure there is a 50mm overhang at the bottom and work from the bottom to the top. Hammer the tacks into the felt at 150mm intervals.

FASCIA'S & FINIALS

FIXINGS NEEDED:



4 x 40mm Screws
QTY: 16





3.5 x 25mm Screws
QTY: 4




20mm Bronze Pins
QTY: 2



Timberdale Badge
QTY: 1

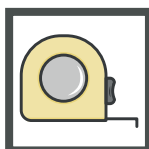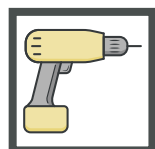


STEP 1: FASCIA ASSEMBLY

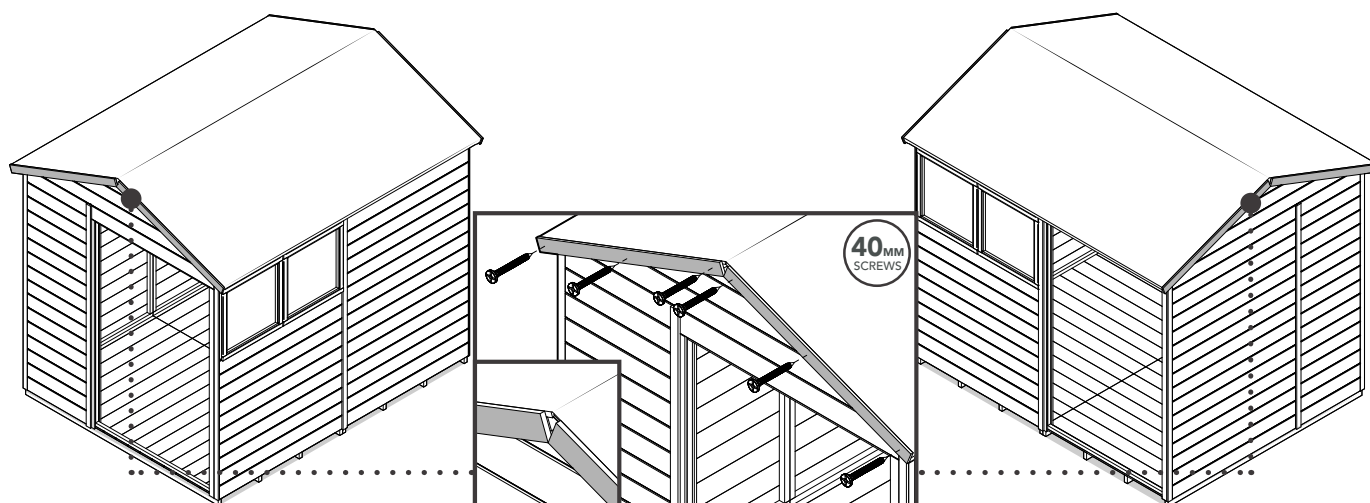

APEX & REVERSE APEX FASCIA'S

Position and secure the Fascia's to the front and back or the sides of your shed as shown above. The fascia's bottom edge will meet each other when positioning. Ensure to secure the Fascia's into the Apex Sections framework behind.


STEP 2: FINIAL ASSEMBLY

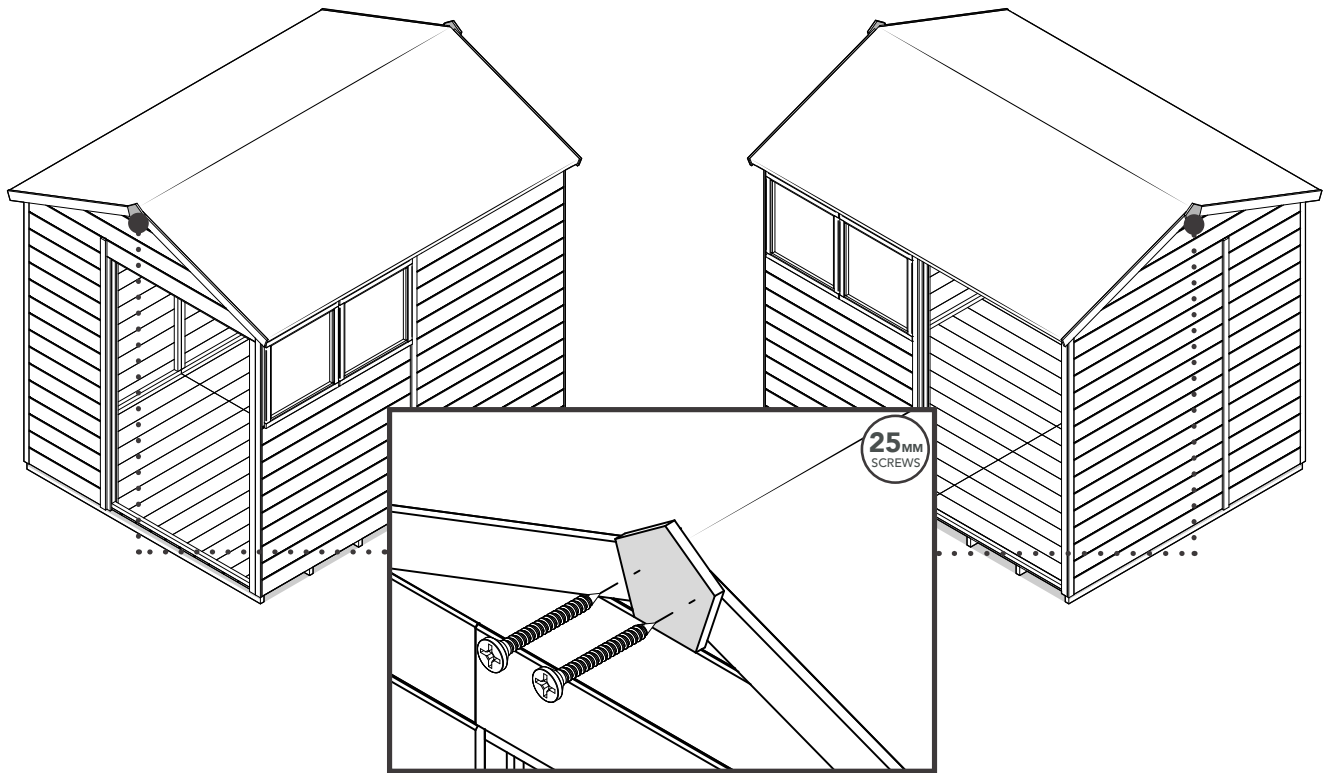

FINIALS

Position and secure the Finials to the Fascia's as shown above. Ensure to secure through the Fascia's into the framework behind.

STEP 3: BADGE

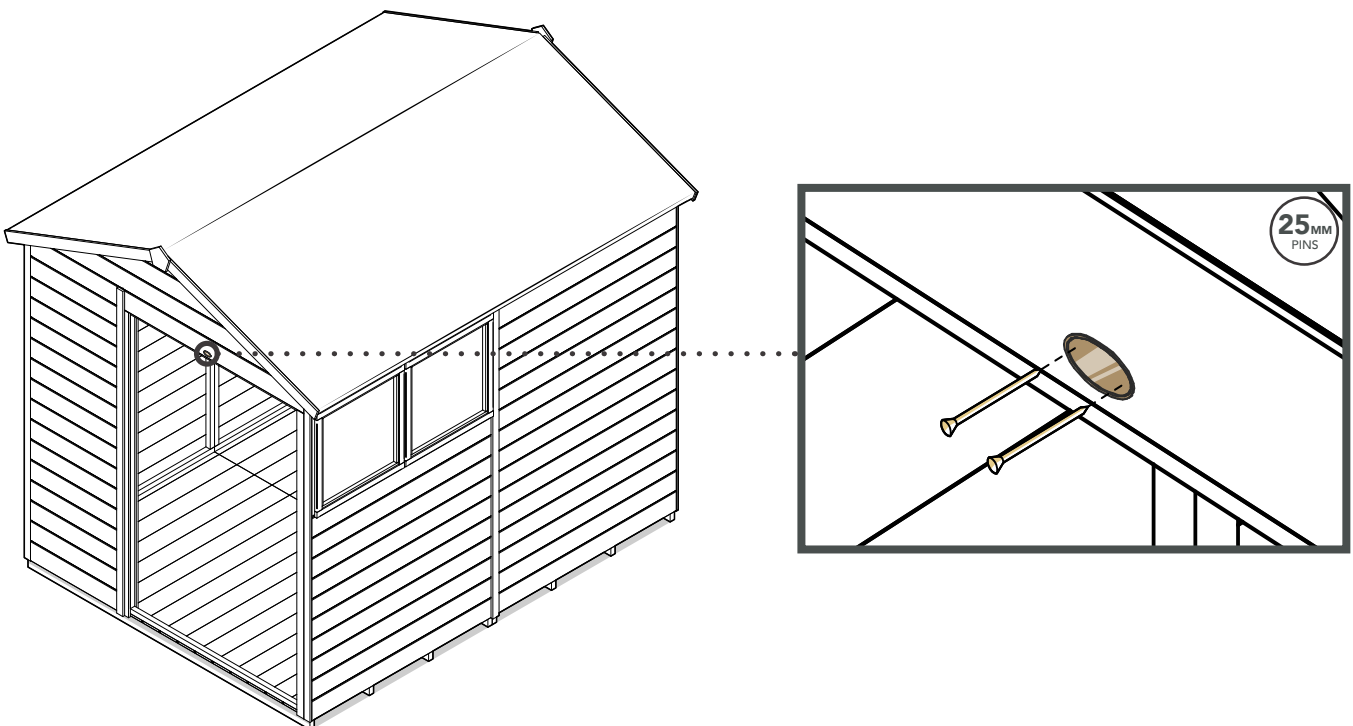


PIN YOUR BADGE


Position and secure your badge above the door opening, into the Door Panel framework behind with the pins provided.

DOUBLE DOOR INSTALLATION

FIXINGS NEEDED:

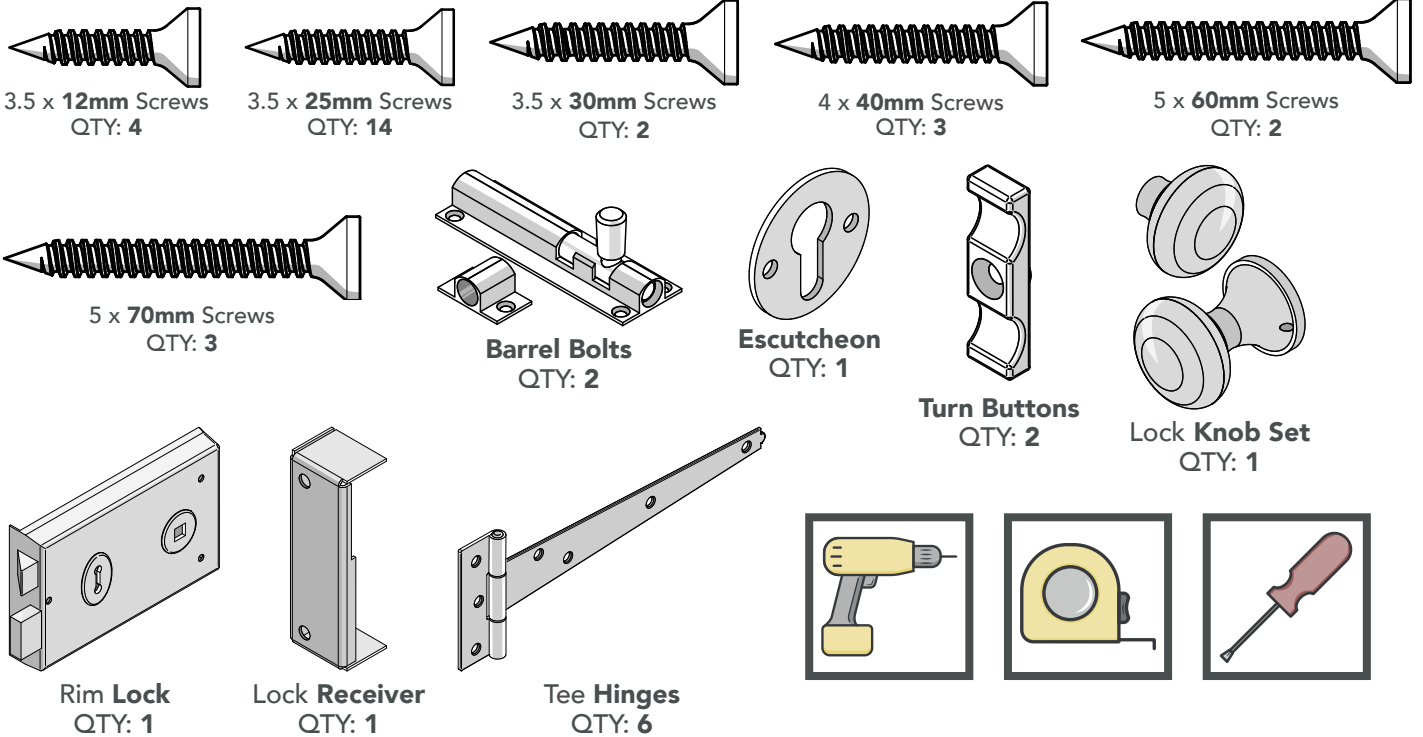


STEP 1: DOOR HINGES & INSTALLATION

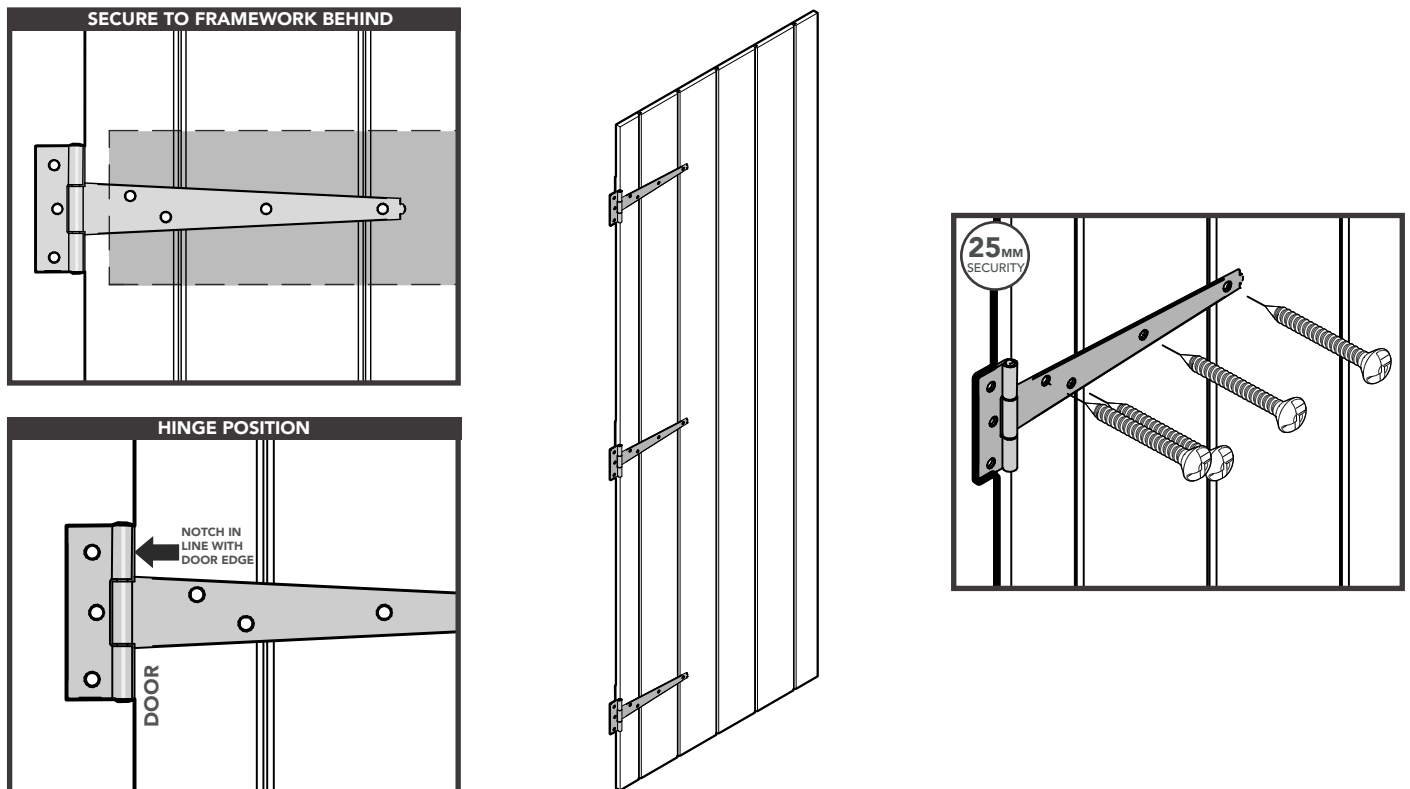

DOOR HINGES



Position and secure the hinges to the framework behind on the Door. Please take note of the hinge position. Ensure the outer face of the notch on the hinge is in line with the Door edge.

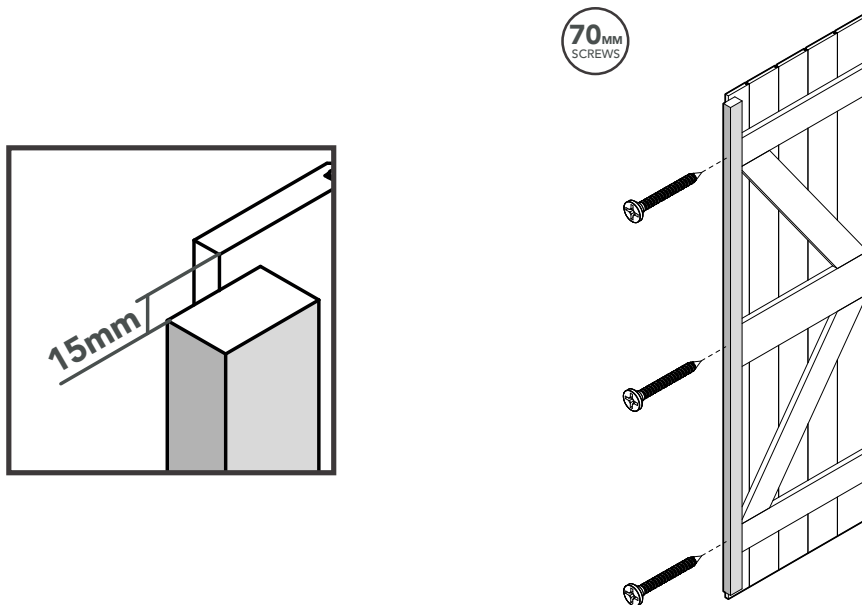

SLAMMING STRIP

Secure the Slamming Strip to one of your Doors as this will be your 'closed' Door. Ensure you screw through the Slamming Strip into the Door framework as shown above.

Slamming Strip size (45x28x1640mm)

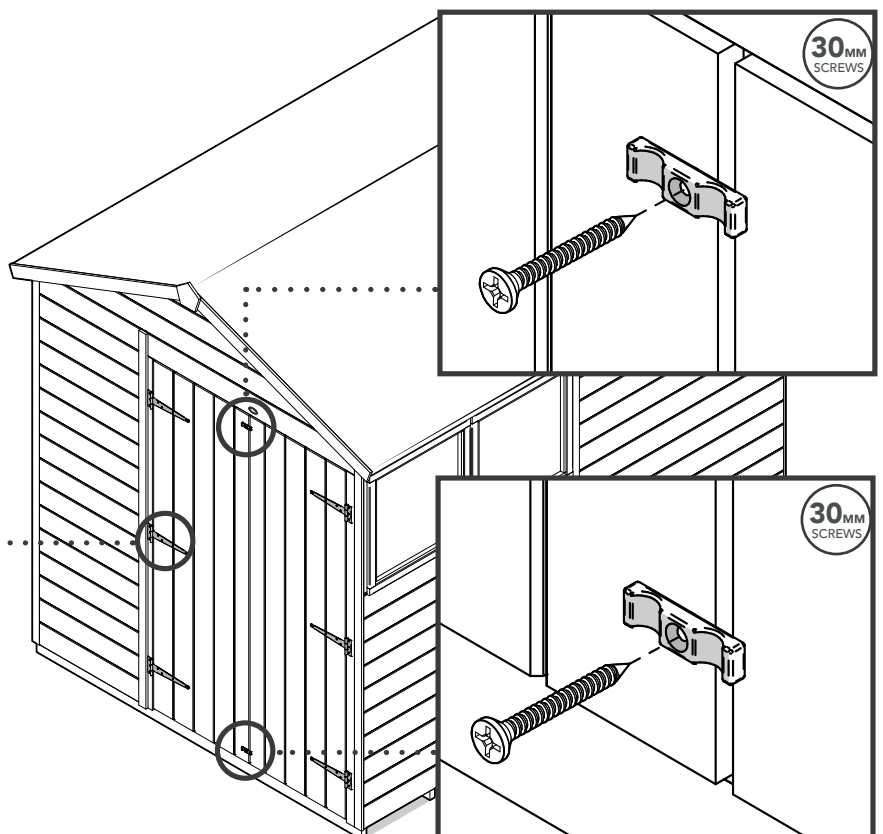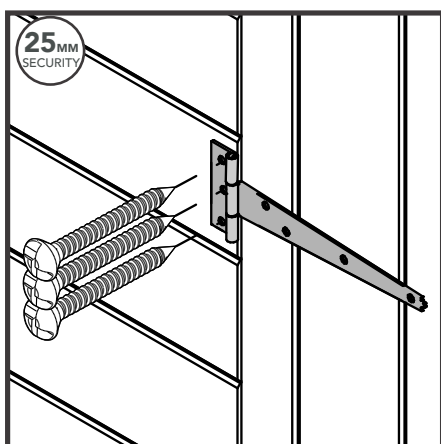


DOOR INSTALLATION

Position the Door into the opening, ensuring it's level. Make sure the hinges are up against the T&G boards with a 5mm gap at the top of the Door. Once positioned, **secure all hinges** to the Door Panel into the **framework behind**.

TURN BUTTONS


Position and secure a Turn Button to the top and bottom of the Door Panel as shown above.

STEP 2: DOOR FIXINGS

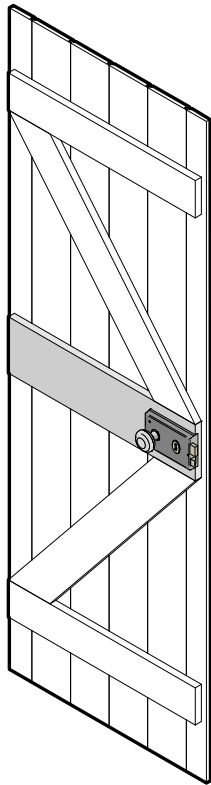



PREPARATION

Use a **16mm drill bit** for the Door Handle hole. Use the Escutcheon as a guide with **5-8mm drill bits** and drill **3 x holes** to provide the hole for the key.

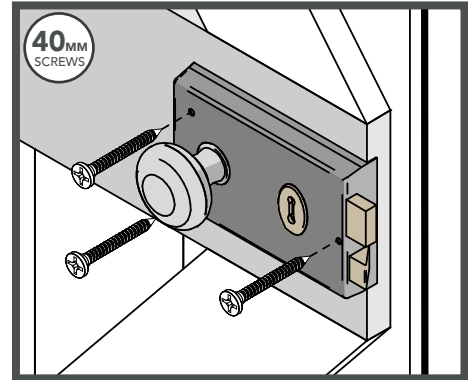




RIM LOCK

Secure the Rim Lock to the Door using 40mm screws. Ensure to hook the Rim Lock over the edge of the middle board. Thread the spindle through to attach the Handle.

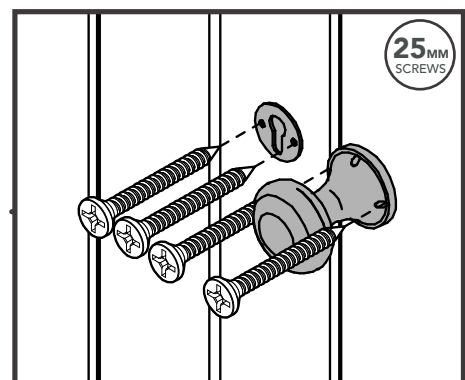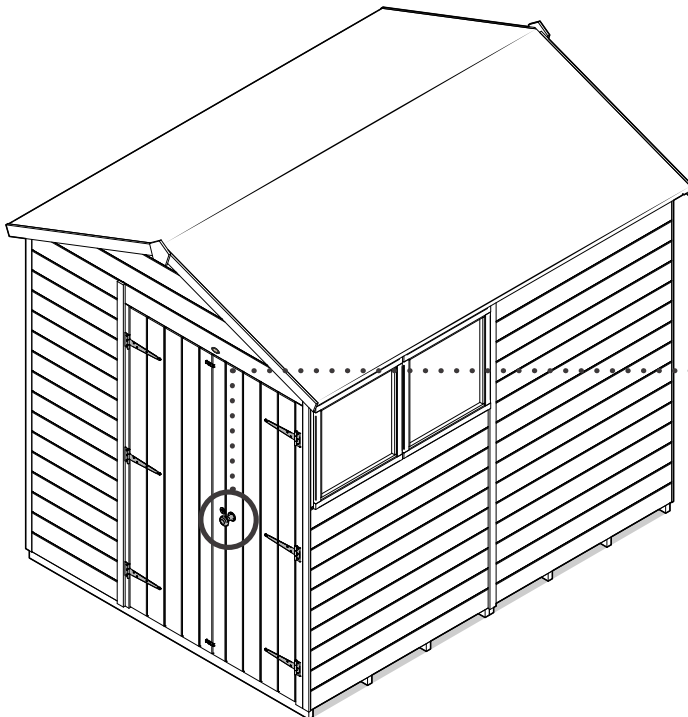

FRONT DOOR FIXINGS

Position and secure the Door Handle and Escutcheon to the external face of the Door using their supplied fixings. Ensure they cover the pre-drilled holes.

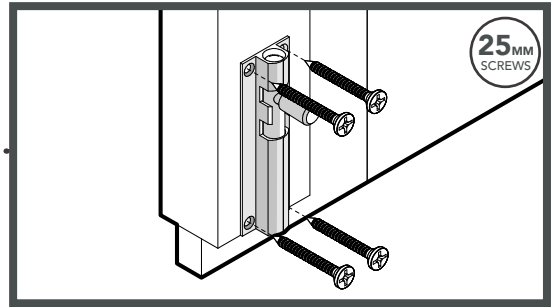
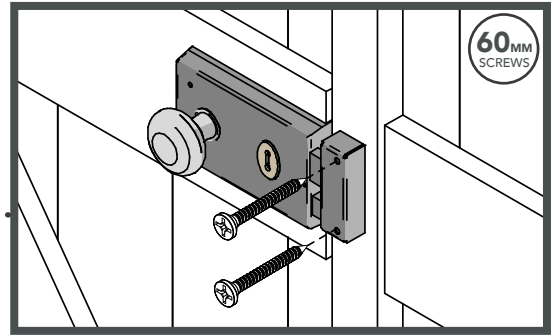
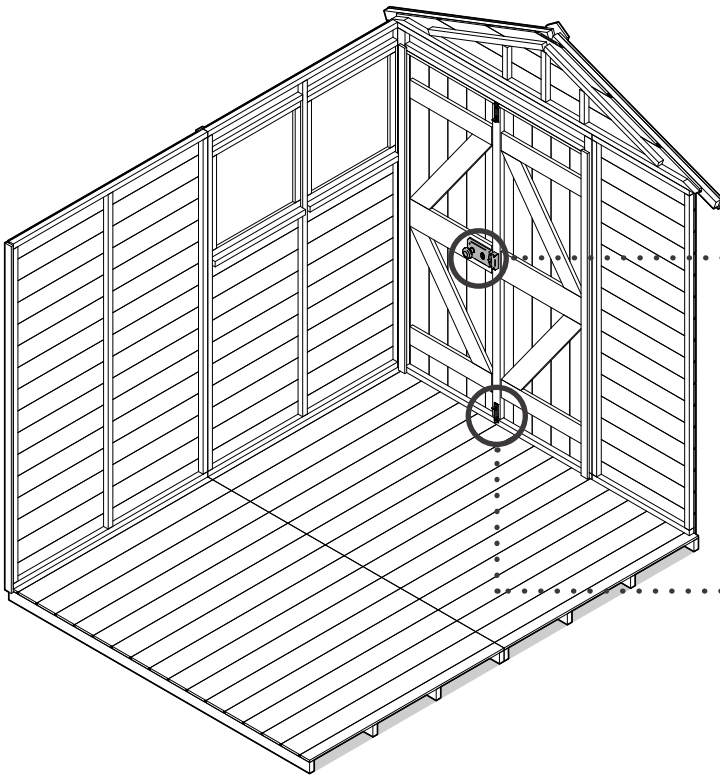


RIM LOCK RECEIVER

Position and secure the Rim Lock Receiver to the framework, using the Rim Lock as a guide. Test the key to ensure the lock works accordingly.

BARREL BOLTS

Position and secure the Barrel Bolts flush to the Slamming Strip as shown above. Use its supplied screws and ensure to secure a Barrel Bolt to the top and bottom of the Slamming Strip.

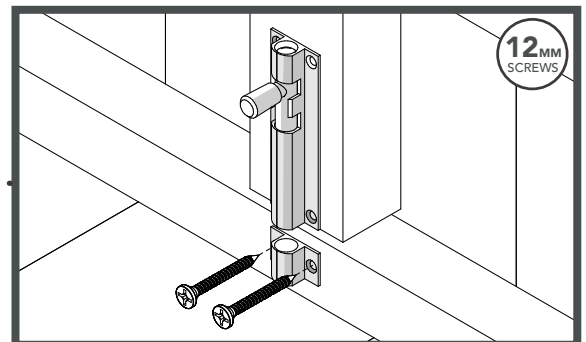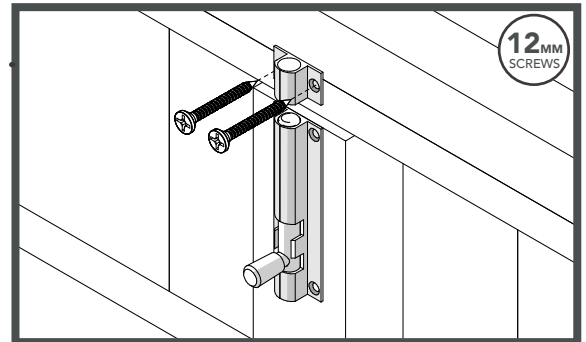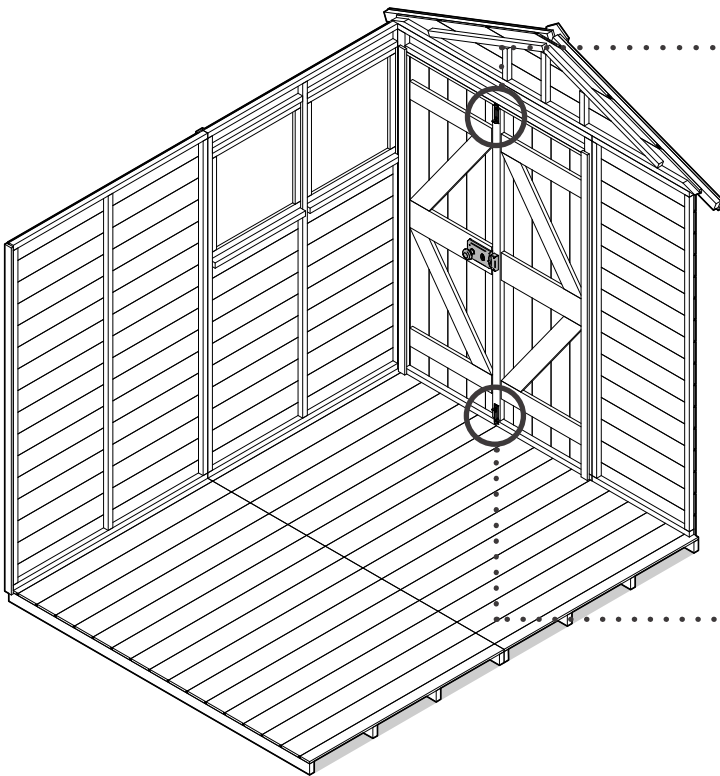

BARREL BOLT RECEIVERS

Position and secure the Barrel Bolt Receivers to the Door Panel framework, using the secured Barrel Bolts as a guide as shown above.



Making British gardens great

Forest Garden Ltd,
Unit 288 Oak Drive,
Hartlebury Trading Estate,
Hartlebury,
Worcestershire,
DY10 4JB

t: 0333 321 3142
w: forestgarden.co.uk
e: info@forestgarden.co.uk

EU Authorised Representative:
Authorised Representative Service,
77 Camden Street Lower Dublin,
D02 XE80, Ireland